



# DVD RECORDER

## OWNER'S MANUAL

MODEL NO. LGDVDR313





Before connecting, operating or adjusting this product,  
please read this instruction booklet carefully and completely.



## Safety Precautions



**CAUTION:** TO REDUCE THE RISK  
OF ELECTRIC SHOCK  
DO NOT REMOVE COVER (OR BACK)  
NO USER-SERVICEABLE PARTS INSIDE  
REFER SERVICING TO QUALIFIED SERVICE  
PERSONNEL.

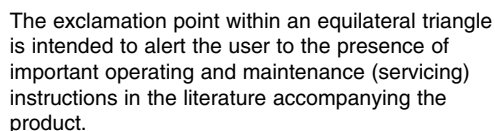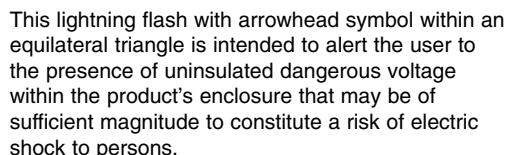


**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**ATTENTION:** POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

**WARNING:** Do not install this equipment in a confined space such as a bookcase or similar unit.

**NOTE TO CABLE/TV INSTALLER:** This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

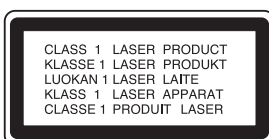

**CAUTION:**

This DVD Recorder employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**REGULATORY INFORMATION: FCC Part 15**

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC COMPLIANCE:** The responsible party for this product's compliance is:

LG Electronics U.S.A., Inc., 1000 Sylvan Avenue, Englewood  
Cliffs, NJ 07632 Phone: 1-201-816-2000

**SERIAL NUMBER:** The serial number is found on the back of this unit. This number is for this unit only. You should record the serial number in the space provided and retain this guide as a permanent record of your purchase.

Model No. LGDVDR313

Serial No. \_\_\_\_\_

# IMPORTANT SAFETY INSTRUCTIONS

**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL. AND THOSE MARKED ON THE PRODUCT. RETAIN THIS MANUAL FOR FUTURE REFERENCE.**

This product has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this product will protect you if you observe the following procedures for installation, use, and servicing.

This product does not contain any parts that can be repaired by the user.


**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

1. **Read these instructions.** - All these safety and operating instructions should be read before the product is operated.
2. **Keep these instructions.** - The safety, operating and use instructions should be retained for future reference.
3. **Heed all warnings.** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow all instructions.** - All operating and use instructions should be followed.
5. **Do not use this product near water.** - For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; or near a swimming pool; and other areas located near water.
6. **Clean only with dry cloth.** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over-heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
8. **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with apparatus. When a cart is used, use caution when moving the cart/product combination to avoid injury from tip-over.**
13. **Unplug this product during lightning storms or when unused for long periods of time.**
14. **Refer all servicing to qualified service personnel.** Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Table of Contents

### INTRODUCTION

Safety Precautions.....	2
<b>IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>3</b>
<b>Table of Contents .....</b>	<b>4-5</b>
<b>DVD Recorder Overview .....</b>	<b>6-11</b>
Recordable Discs .....	6
Playable Discs .....	6
Disc-related terms .....	7
• Types of video CDs .....	7
About Symbols .....	7
• About the  symbol display .....	7
• About the disc symbols for instructions .....	7
About DVD-R and DVD-RW discs .....	8
• What are 'recording modes'? .....	8
• Is editing a DVD like editing a video tape? ..	8
• About word 'Original' and 'Playlist' .....	8
About DVD+R and DVD+RW discs .....	8
About DVD recording .....	9-10
• Disc types and recording formats, modes, and settings .....	9
• Notes for recording .....	9
• Restrictions on video recording .....	10
• What is 'CPRM'? .....	10
• Copyright .....	10
Remote Control Operating Range .....	10
Remote Control Battery Installation .....	10
Reset the DVD Recorder .....	10
Precautions .....	11
• Handling the unit .....	11
• Cleaning the unit .....	11
Notes on Discs .....	11
• Handling discs .....	11
• Storing discs .....	11
• Cleaning discs .....	11
<b>Front Panel .....</b>	<b>12</b>
<b>Function Display Window .....</b>	<b>13</b>
<b>Remote Control Overview .....</b>	<b>14</b>
<b>Rear Panel .....</b>	<b>15</b>

### DVR HOOKUP

<b>Connections .....</b>	<b>16-19</b>
Connecting Antenna/	
Cable TV to DVD Recorder .....	16
TV Connections .....	17
Amplifier Connections .....	18
Accessory Audio/Video (A/V) Connections	
to DVD Recorder .....	19
Digital Camcorder Connections .....	19

### DVR SETUP

<b>Pre-operation Setup .....</b>	<b>20-28</b>
Menu Overview and Operation .....	20
General Operation .....	20
General .....	20-23
• Tuning Band Select .....	20
• EZ Channel Scan .....	20
• To Add or Erase Channels from Memory ..	21
• Auto Clock Set .....	21
• Manual Clock Set .....	22
• TV Aspect .....	22
• Display Mode .....	22
• Progressive Scan .....	22
• PBC.(On/Off) .....	23
• Factory Set .....	23
Language .....	23
• Display Language .....	23
• Disc Language .....	23
Audio .....	24
• Dolby Digital .....	24
• DTS .....	24
• MPEG .....	24
• Sampling Frequency .....	24
• DRC (Dynamic Range Control) .....	24
• Vocal .....	24
Lock (Parental Control) .....	25-26
• Set Password .....	25
• Rating .....	25
• Country Code .....	26
Recording .....	26-27
• Record Mode Set .....	26
• Record Aspect .....	26
• DV Rec Audio .....	27
• Auto Chapter .....	27
Disc .....	27-28
• Disc Format .....	27
• Finalize .....	28
• Disc Label .....	28
• Disc Protect .....	28
General Explanation of On-Screen Display ..	29-31
• Displaying Information While Watching TV ..	29
• Displaying Disc Information on-screen ..	29-31

# Table of Contents

## PLAYBACK

<b>DVD and Video CD Operation</b> . . . . .	<b>32-35</b>
DVD or Video CD Playback . . . . .	32
General Features . . . . .	32
• Selecting TITLES . . . . .	32
• Selecting CHAPTER/TRACKs . . . . .	32
• Search . . . . .	32
• Still Picture and Frame-by-Frame Playback . . . . .	32
• Slow Motion . . . . .	33
• Random . . . . .	33
• Repeat . . . . .	33
• Repeat A-B . . . . .	33
• Time Search . . . . .	33
• Zoom . . . . .	34
• Marker Search . . . . .	34
• Checking the contents of	
DVD Video discs: Menus . . . . .	34
• Title Menu . . . . .	34
• Disc Menu . . . . .	34
• Camera Angle . . . . .	34
• Changing the Audio Soundtrack . . . . .	34
• Changing the Audio Channel . . . . .	35
• 3D Surround . . . . .	35
• Subtitles . . . . .	35
• Instant Skip . . . . .	35
• Finding Locations on a Disc . . . . .	35
• Last Condition Memory . . . . .	35
• PIP (Picture-in-Picture) . . . . .	35
<b>Audio CD and MP3 Operation</b> . . . . .	<b>36-37</b>
Audio CD or MP3 Disc Playback . . . . .	36
Music menu options . . . . .	36
• Pause . . . . .	37
• Changing Tracks . . . . .	37
• Repeat Track/All(Folder)/Off . . . . .	37
• Random . . . . .	37
• 3D Surround . . . . .	37
• Changing the Audio Channel . . . . .	37
• Search . . . . .	37
• Repeat A-B . . . . .	37
Notes on MP3 Recordings . . . . .	37
<b>Audio CD and MP3 Programmed Playback</b> . . . . .	<b>38</b>
<b>JPEG File Operation</b> . . . . .	<b>39</b>
Viewing JPEG Files on a Disc . . . . .	39
• Skip Image . . . . .	39
• Rotate Images . . . . .	39
• View Slide Shows . . . . .	39
• Notes or JPEG Files . . . . .	39

## RECORDING

<b>Basic Recording</b> . . . . .	<b>40</b>
Basic Recording from TV channels . . . . .	40
Instant Timer Recording . . . . .	40
<b>Timer Recording</b> . . . . .	<b>41</b>
Checking Timer Recording Details . . . . .	41
Canceling a Timer Recording . . . . .	41
Stopping a Timer Recording in Progress . . . . .	41
Timer Recording Troubleshooting . . . . .	41

<b>Recording from External Input</b> . . . . .	<b>42-43</b>
Recording from External Devices . . . . .	42
Recording from a Digital Camcorder . . . . .	42
What is DV? . . . . .	43
• DV-Related Messages . . . . .	43
• Troubleshooting . . . . .	43




## EDITING

<b>Title List and Chapter List Menu</b> . . . . .	<b>44-48</b>
Using the Title List-Original menu <b>VR</b> . . . . .	44
Using the Chapter List-Original menu <b>VR</b> . . . . .	44
Using the Title List-Playlist menu <b>VR</b> . . . . .	45
Using the Chapter List-Playlist menu <b>VR</b> . . . . .	45
Using the Title List menu <b>Video</b> . . . . .	46
• Deleting a Title . . . . .	46
• If the disc has already been finalized . . . . .	46
Using the Title List menu <b>+RW</b> . . . . .	47
Using the Chapter List menu <b>+RW</b> . . . . .	47
Using the Title List menu <b>+R</b> . . . . .	48
Using the Chapter List menu <b>+R</b> . . . . .	48
<b>Title and Chapter Editing</b> . . . . .	<b>49-55</b>
Titles, Chapters and Parts . . . . .	49
Adding Chapter Markers . . . . .	49
Changing Title Thumbnails . . . . .	49
Making a New Playlist . . . . .	50
Adding Additional Title/Chapters to the Playlist . . . . .	50
Deleting a Title/Chapter . . . . .	51
Deleting a Part . . . . .	51
Undoing/Redoing the Last Delete . . . . .	52
Naming a Title . . . . .	52
Combining Two Chapters Into One . . . . .	53
Moving a Playlist Chapter . . . . .	53
Protect a Title . . . . .	54
Hide a Title/Chapter . . . . .	54
Divide One Title Into Two . . . . .	55
<b>Additional Information</b> . . . . .	<b>56</b>
Clean-up Recording . . . . .	56
Overwrite Recording . . . . .	56
Viewing Title List menu displayed on other	
DVD Recorders or Players . . . . .	56
Playing your recordings on other	
DVD players (Finalizing a Disc) . . . . .	56

## REFERENCE

<b>Language Code List</b> . . . . .	<b>57</b>
<b>Country Code List</b> . . . . .	<b>58</b>
<b>Controlling Your TV with the Supplied Remote</b> . . . . .	<b>59</b>
<b>Troubleshooting</b> . . . . .	<b>60-61</b>
<b>Specifications</b> . . . . .	<b>62</b>

## About the symbols for instructions

-  Indicates hazards likely to cause harm to the unit itself or other material damage.
-  Indicates special operating features of this unit.
-  Indicates tips and hints for making the task easier.

## DVD Recorder Overview

### Recordable Discs

**DVD-RW (Digital Video Disc - ReWritable):**

These Discs can be recorded on repeatedly. Recordings can be erased, then you can record again on the same Disc.

**DVD-R (Digital Video Disc - Recordable):**

These Discs can be recorded only once. After you finalize a DVD-R, you cannot record on it or edit it.



DVD+ReWritable

**DVD+RW (Digital Video Disc + ReWritable):**

These Discs can be recorded on repeatedly. Recordings can be erased, then you can record again on the same Disc.



DVD+R

**DVD+R (Digital Video Disc + Recordable):**

These Discs can be recorded only once. After you finalize a DVD+R, you cannot record on it or edit it any more.

#### Notes

- This Recorder cannot record CD-R or CD-RW discs.
- DVD-R/RW, DVD+R/RW and CD-R/RW discs recorded using a personal computer or a DVD or CD Recorder may not play if the disc is damaged or dirty, or if there is dirt or condensation on the Recorder's lens.
- If you record a disc using a personal computer, even if it is recorded in a compatible format, there are cases in which it may not play because of the settings of the application software used to create the disc. (Check with the software publisher for more detailed information.)

### Playable Discs



DVD  
(8 cm/12 cm disc)



Video CD (VCD)  
(8 cm / 12 cm disc)



Audio CD  
(8 cm/12 cm disc)

In addition, this unit can play DVD-R/DVD-RW discs; DVD+R/DVD+RW discs; CD-R/CD-RW discs that contain audio titles, MP3 files, or JPEG files; SVCD; and kodak picture CDs.

#### Notes

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/±RW) disc itself, some CD-R/RW (or DVD±R/±RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). Doing so may result in malfunctions.

#### Regional code of the DVD Recorder and DVDs

This DVD Recorder is designed and manufactured for playback of Region 1 encoded DVD software. The region code on the labels of some DVD discs indicates which type of DVD Recorder can play those discs. This unit can play only DVD discs labeled 1 or ALL. If you try to play any other discs, the message "Incorrect region code. Can't play back" will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.



#### Notes on DVDs and Video CDs

Some playback operations of DVDs and Video CDs may be intentionally fixed by software manufacturers. As this unit plays DVDs and Video CDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available or other functions may be added. Refer also to the instructions supplied with the DVDs and Video CDs. Some DVDs made for business purposes may not be played on the unit.

## DVD Recorder Overview (Continued)

### Disc-related terms

#### Title (DVD only)

The main film content, accompanying feature content, or music album.

Each title is assigned a title reference number enabling you to locate it easily.

#### Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles. A title is composed of one or several chapters. Each chapter is assigned a chapter number to enable you to locate the chapter you want. Depending on the disc, chapters may not be labeled.

#### Track (Video CD and Audio CD only)

Sections of a picture or a musical piece on a Video CD or an Audio CD. Each track is assigned a track number, enabling you to locate the track you want.

#### Scene

On a Video CD with PBC (Playback control) functions, moving pictures and still pictures are divided into sections called "Scenes". Each scene available is displayed on the Scene menu and assigned a scene number, enabling you to locate the scene you want.

A scene may be composed of one or several tracks.

### Types of Video CDs

There are two types of Video CDs:

#### Video CDs equipped with PBC (Version 2.0)


PBC (Playback control) functions allow you to interact with the system via menus, search functions, or other typical computer-like operations. Moreover, high resolution still pictures can be played if they are included on the disc.

#### Video CDs not equipped with PBC (Version 1.1)

Operated in the same way as audio CDs, these discs allow playback of video pictures as well as sound, but they are not equipped with PBC.





### About Symbols










#### About the symbol display

" " may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific disc, or at that time.

#### About the disc symbols for instructions

A section whose title has one of the following symbols are applicable only to those discs represented by the symbol.

Many functions provided on this Recorder are dependent on the recording mode. One or more of the symbols (, , , ) appear by each function (explained in this manual) so that you can see at a glance whether it's applicable to the disc loaded.

-  DVD-R/RW with Video recording mode
-  DVD-RW with VR recording mode
-  DVD+R disc
-  DVD+RW disc
-  DVD-Video disc
-  Video CDs
-  Audio CDs
-  MP3 CDs
-  JPEG CDs

The finalized DVD disc is a DVD-Video disc



## DVD Recorder Overview (Continued)

### About DVD-R and DVD-RW discs

#### How are DVD-R and DVD-RW discs different?

The essential difference between DVD-R and DVD-RW is that DVD-R is a record-once medium, while DVD-RW is a re-recordable/erasable medium. You can re-record/erase a DVD-RW disc approximately 1,000 times.

#### Can I play my recordable discs in a regular DVD player?

Generally, DVD-R discs and DVD-RW discs recorded in Video mode are playable in a regular DVD player, but they must be 'finalized' first. This process fixes the contents of the disc to make them readable to other DVD players as DVD-Video discs.

DVD-RW discs recorded in VR (Video Recording) mode are playable in some players.



This indicates a product feature that is capable of playing DVD-RW discs recorded with Video Recording format.

#### What are 'recording modes'?

There are two recording modes available using this Recorder: VR mode and Video mode. When recording to a DVD-R disc, recordings are always in Video mode. DVD-RW discs can be formatted for VR mode recording or Video mode recording.

##### VR mode recording

- 4 different picture quality/recording time settings available (HQ, SQ, LQ, EQ)
- Not playable on regular DVD players
- Recordings can be extensively edited
- Total number of titles on the disc should be less than 99.

##### Video mode recording

- 4 different picture quality/recording time settings available (HQ, SQ, LQ, EQ)
- Playable on regular DVD players (after finalization)
- Limited editing features
- Total number of titles on the disc should be less than 99.

#### Note

DVD-Video Format (Video mode) is a new format for recording on DVD-R/RW and DVD+R/RW discs that was approved by the DVD Forum in 2000. You may therefore experience problems playing recordable DVD discs in some players. Symptoms include video artifacts, audio and/or video dropouts and playback suddenly stopping.

Our company cannot take responsibility for problems playing discs recorded on this Recorder in other players.

### Is editing a DVD like editing a video tape?

No. When you edit a video tape you need one video deck to play the original tape and another to record the edits. With DVD, you edit by making a 'Playlist' of what to play and when to play it. On playback, the Recorder plays the disc according to the Playlist.

### About word 'Original' and 'Playlist'

Throughout this manual, you will often see the words Original and Playlist to refer to the actual content and the edited version.

- **Original:** content refers to what's actually recorded on the disc.
- **Playlist:** content refers to the edited version of the disc — how the Original content is to be played.

### About DVD+R and DVD+RW discs

#### How are DVD+R and DVD+RW discs different?

The essential difference between DVD+R and DVD+RW is that DVD+R is a record-once medium, while DVD+RW is a re-recordable/erasable medium. You can re-record/erase a DVD+RW disc approximately 1,000 times.

##### DVD+RW mode recording

- 4 different picture quality/recording time settings available (HQ, SQ, LQ, EQ)
- Playable on regular DVD players (finalization)
- The edited contents is playable on regular DVD players only after finalizing
- Recordings can be edited the title/chapter
- Total number of titles on the disc should be less than 99.

##### DVD+R mode recording

- 4 different picture quality/recording time settings available (HQ, SQ, LQ, EQ)
- Playable on regular DVD players (after finalization)
- Any edited contents are not be compatible on regular DVD players. (Hide, chapter combine, added chapter mark, etc.)
- Limited title/chapter editing features
- Total number of titles on the disc should be less than 99.



## DVD Recorder Overview (Continued)

### About DVD recording

#### Notes

- This Recorder cannot make recordings on CD-R or CD-RW discs.
- Our company takes no responsibility for recording failure due to power outages, defective discs, or damage to the Recorder.
- Fingerprints and small scratches on a disc can affect playback and/or recording performance. Please take proper care of your discs.

### Disc types and recording formats, modes, and settings

This Recorder can play five different kinds of DVD discs: pre-recorded DVD-Video discs, DVD-RW, DVD-R, DVD+RW and DVD+R discs. The disc format for DVD-R discs is always "Video format"—the same as pre-recorded DVD-Video discs. This means that once finalized, you can play a DVD-R in a regular DVD player.

By default, the DVD-RW disc format is Video Recording (VR) format, though you can change this to Video format, if required. (Reinitializing the disc will erase the contents of the disc.)

The recording mode is closely related to the disc format. If the disc format is Video Recording format, then the recording mode is VR mode; if the disc format is Video mode, then the recording mode is Video mode (except for DVD-Video, which is not recordable, and so does not have a recording mode).

Within the recording modes (which are fixed for them whole disc) are the record settings. These can be changed as required for each recording and determine the picture quality and how much space the recording will take up on the disc.

### Notes for recording

- The recording times shown are not exact because the Recorder uses variable bit-rate video compression. This means that the exact recording time will depend on the material being recorded.
- When recording a TV broadcast, if the reception is poor or the picture contains interference, the recording times may be shorter.
- If you record still pictures or audio only, the recording time may be longer.
- The displayed times for recording and time remaining may not always add up to exactly the length of the disc.
- The recording time available may decrease if you heavily edit a disc.
- If using a DVD-RW disc, make sure you change the recording format (Video mode or VR mode) before you record anything on the disc. See page 27 (Disc Format) for how to do this.
- When using a DVD-R disc, you can keep recording until the disc is full, or until you finalize the disc. Before you start a recording session, check the amount of recording time left on the disc.
- When using a DVD-RW disc in Video mode, recording time available will only increase if you erase the last title recorded on the disc.
- The Erase Title option in the Title List-Original menu only hides the title, it does not actually erase the title from the disc and increase the recording time available (except for the last recorded title on a DVD-RW disc in Video mode).
- Overwrite recording is available using DVD+RW discs.

Disc type	Disc format	Recording mode	Functions
DVD-Video	Video format	n/a	Playback only
DVD-RW	Video Recording format (default)	VR mode	Playback, Recording, Original/Playlist Editing
	Video format	Video mode	Playback, limited Recording, limited Editing
DVD-R	Video format	Video mode	Playback, limited Recording, limited Editing
DVD+RW	+RW Video format	DVD+RW	Playback, limited Recording, Title/Chapter Editing
DVD+R	+R Video format	DVD+R	Playback, limited Recording, limited Title/Chapter Editing

## DVD Recorder Overview (Continued)

### Restrictions on video recording

- You cannot record copy-protected video using this Recorder. Copy-protected video includes DVD-Video discs and some satellite broadcasts. If copy-protected material is encountered during a recording, recording will pause or stop automatically and an error message will be displayed on-screen.
- Video that is 'copy-once only' can only be recorded using a DVD-RW disc in VR mode with CPRM (see below).

### What is 'CPRM'?

CPRM is a copy protection system (with scramble system) only allowing the recording of 'copy once' broadcast programs. CPRM stands for Content Protection for Recordable Media.

This Recorder is CPRM compatible, which means that you can record copy-once broadcast programs, but you cannot then make a copy of those recordings. CPRM recordings can only be made on DVD-RW discs formatted in VR mode, and CPRM recordings can only be played on players that are specifically compatible with CPRM.

 
### Copyright

- Recording equipment should be used only for lawful copying and you are advised to check carefully what is lawful copying in the area in which you are making a copy. Copying of copyright material such as films or music is unlawful unless permitted by a legal exception or consented to by the rights owner.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision corporation. Reverse engineering or disassembly is prohibited.

### Remote Control Operation Range

Point the Remote Control at the remote sensor and press the buttons.

### Remote Control Battery Installation



Remove the battery cover on the rear of the Remote Control, and insert two R03 (size AAA) batteries with  $\oplus$  and  $\ominus$  matched correctly.



#### **Caution**

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

### Resetting the DVD Recorder

If you observe any of the following symptoms...

- The unit is plugged in, but the power will not turn on or off.
- The front panel display is not working.
- The DVD Recorder is not operating normally.

...you can reset the DVD Recorder as follows:

- Press and hold the POWER button for at least five seconds. This will force the unit to power off. Press the POWER button again to turn the unit back on.
- Unplug the power cord, wait at least five seconds, and then plug it in again.

## DVD Recorder Overview (Continued)

### Precautions

#### Handling the unit

##### When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory.

##### When setting up the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

##### To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

#### Cleaning the unit

##### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

##### To obtain a clear picture

The DVD Recorder is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor.

Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

For details, please contact your nearest dealer.

### Notes on Discs

#### Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface. Do not stick paper or tape on the disc.




#### Storing discs

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

#### Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center outward.

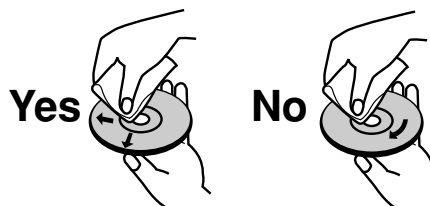

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

## Front Panel

### POWER

Switches the DVD Recorder ON or OFF.

### REC (●)

Starts recording. Press repeatedly to set the recording time.

### INPUT2 (VIDEO IN/AUDIO IN (Left/Right))

Connect the audio/video output of an external source (Audio system, TV/ Monitor, VCR, Camcorder, etc.).

### STOP (■)

Stops playback or recording.

### Display window

Shows the current status of the DVD Recorder.

### PAUSE (||)

Pause playback or recording temporarily, press again to exit pause mode.

### PLAY (▶)

To play back a disc.

### INPUT 2 (S-VIDEO IN)

Connect the S-Video output of an external source (TV/ Monitor, VCR, Camcorder, etc.).

### OPEN/CLOSE (▲)


Opens or closes the disc tray.

### DV INPUT

Connect the DV output of a digital camcorder.

### Power indicator

Lights up red when the Recorder is in standby mode.

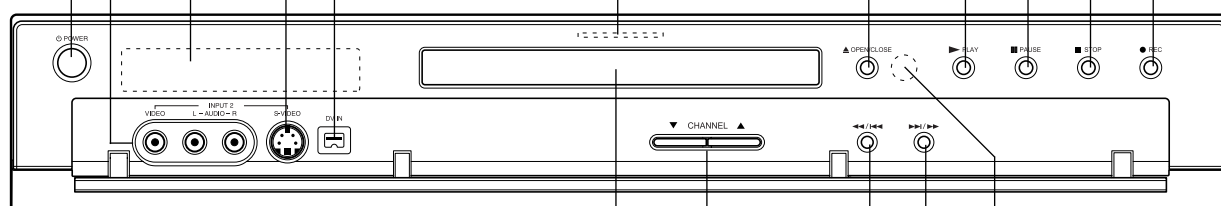

### Disc Tray

Insert a disc here.

### CHANNEL (▲ / ▼)

Scans up or down through memorized channels.



Go to beginning of current chapter/ track or to previous chapter/track.  
Press and hold for two seconds for a fast reverse search during playback.



Go to NEXT chapter/track.  
Press and hold for two seconds for a fast forward search during playback.

### Remote Sensor


Point the DVD Recorder Remote Control here.

## Function Display Window

### Disc type indicators

Indicates the type of disc loaded.

**REC** The Recorder is recording.

 Indicates that the Recorder is timer recording or that a timer recording is programmed.

### HQ, SQ, LQ, EQ

Indicates recording mode.


**ST** Indicates a stereo broadcast is being received.

**SAP** Indicates that an SAP BILINGUAL broadcast is being received.

**CHP** Indicates current chapter number.

**TRK** Indicates current track number.

**TITLE** Indicates current title number

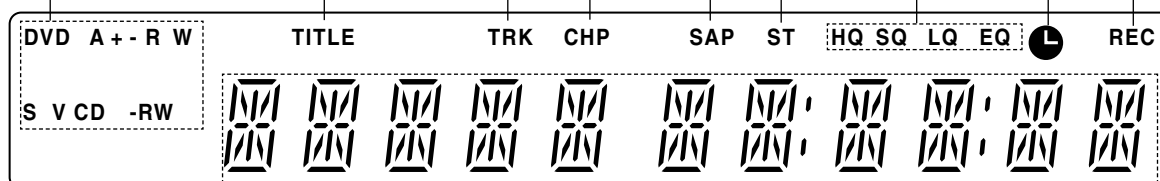

### Character indicators

Indicates clock, total playing time, elapsed time, title number, chapter/track number, channel, etc.

## Remote Control Key Functions Overview

**POWER**  
Turns the Recorder ON and OFF.

**PIP**  
Turns PIP function on and off.

**0-9 numerical buttons**  
Selects numbered options in a menu.

**INPUT**  
Selects the source to use for recording (Tuner, AV1, AV2 or DV IN).

**AUDIO**  
Selects an audio language (DVD) or an audio channel (CD).

**SUBTITLE**  
Selects subtitle languages.

**ANGLE**  
Selects a DVD camera angles, if available.

**REC (●)**  
Starts recording. Press repeatedly to set the recording time.

**REC MODE**  
Selects the recording mode: HQ, SQ, LQ, or EQ.

**TIMER REC**  
Displays Timer Record menu.

**CLEAR**  
Removes a track number on the Program List or a mark on the Marker Search menu.

**ZOOM**  
Enlarges DVD video image.

**INSTANT SKIP**  
Skips 15 seconds forward on the disc (about the length of a typical TV commercial).

**TITLE**  
Displays the disc's Title menu, if available.

**THUMBNAIL**  
Selects a thumbnail picture for the current title and chapter for use in the Original and Playlist menu.

**CHP ADD**  
Inserts a chapter marker when playing/recording a VR mode DVD-RW disc.

**MARKER**  
Marks any point during playback.

**SEARCH**  
Displays Marker Search menu.

**PROGRAM**  
Add the track to the Program List.

**OPEN/CLOSE (▲)**  
Opens and closes the disc tray.

**TV Control Buttons**  
**POWER:** Turns the TV on and off.  
**INPUT:** Selects the TV's source.  
**CH +/-:** Selects TV's channel.  
**VOL +/-:** Sets TV's volume.  
**MUTE:** Temporarily turns TV sound OFF, press again to restore.

**SKIP (I◀◀ / ▶▶I)**  
Go to next chapter or track. Returns to beginning of current chapter or track or go to previous chapter or track.

**SCAN (◀◀ / ▶▶)**  
Search backward or forward.

**PAUSE/STEP (II)**  
Pause playback or recording temporarily, press again to exit pause mode.

**▶ (PLAY)**  
Starts playback.

**STOP (■)**  
Stops playback or recording.

**MENU/LIST**  
Accesses menu on a DVD disc, Title List or Playlist menu.

**SETUP**  
Accesses or removes the Setup menu.

**ENTER**  
 - Acknowledges menu selection.  
 - Displays information while viewing a TV program.

**◀ / ▶ / ▲ / ▼ (left/right/up/down)**  
Selects an option in the menu.

**CH ▲ / ▼ (up/down)**  
Scans up or down through memorized channels.

**DISPLAY**  
Accesses On-Screen Display.

**RETURN (↶)**  
 - Removes the menu.  
 - Displays the menu on a video CD with PBC.


**3D SURR.**  
Selects 3D SURROUND during playback.

**RANDOM**  
Plays tracks in random order.

**REPEAT**  
Repeat chapter, track, title, all.

**A-B**  
Repeat sequence.

## Rear Panel Connections

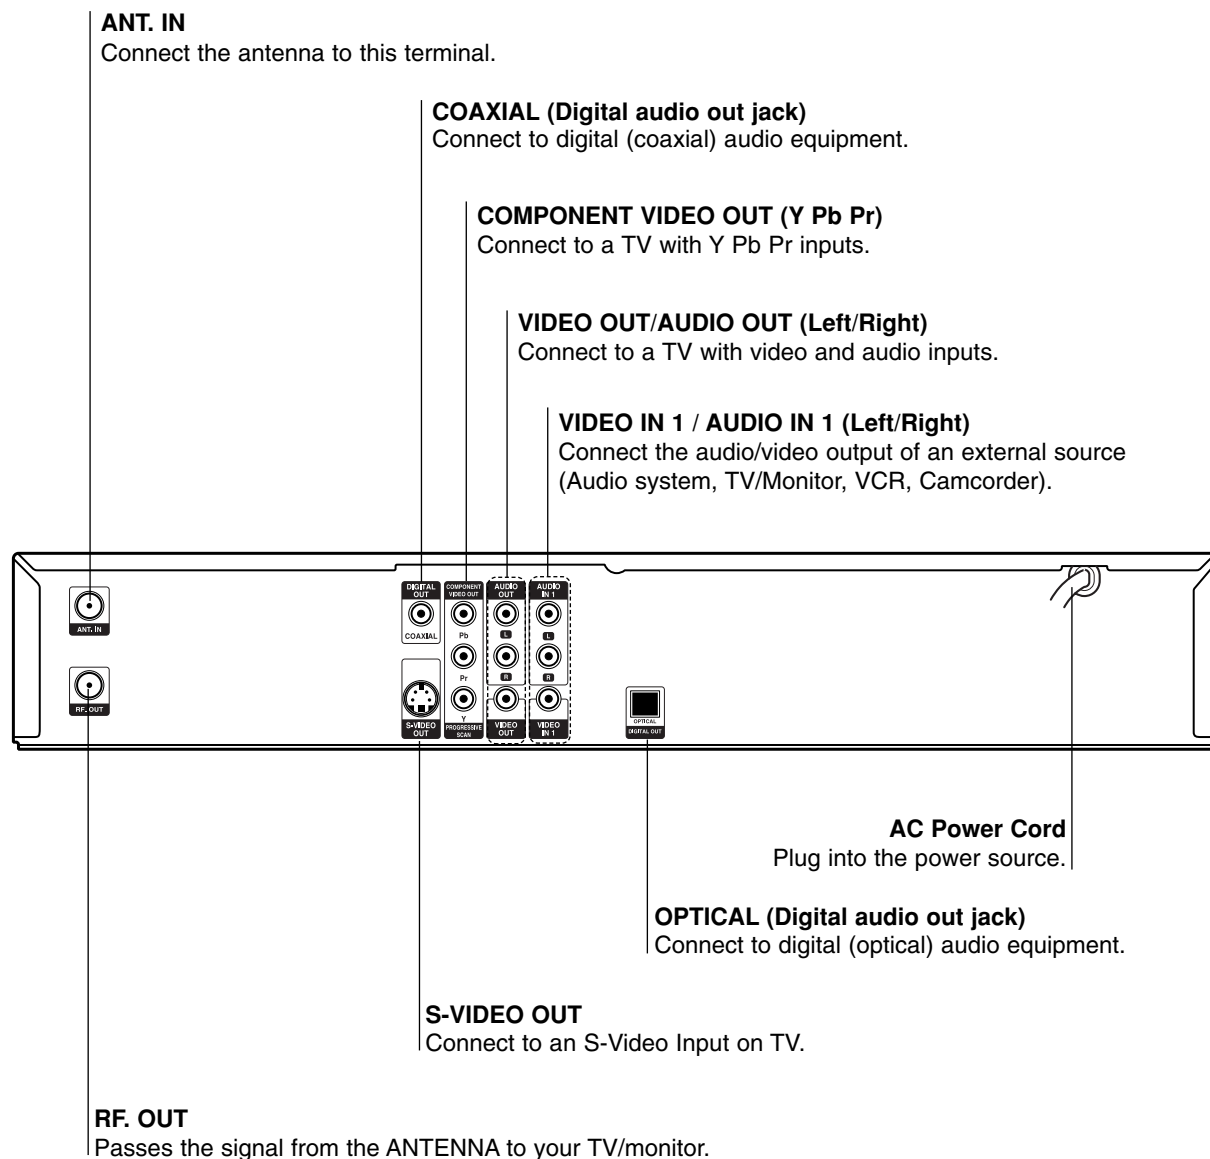

### Caution

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.




## Connections

### Connecting Antenna/Cable TV to DVD Recorder

- 1 Disconnect the antenna leads from the rear of the TV.
- 2 Identify the type of cable from your antenna. If it is a round cable as illustrated, it is a 75 ohm coaxial antenna cable. This cable will connect directly to the jack marked ANT.IN on your DVD Recorder.

#### Tip

If your antenna lead wire is a flat type antenna cable, connect it to an Antenna Adapter (300-ohm to 75-ohm) (not supplied) and slip the Adapter onto the ANT.IN jack. The Adapter does not screw on to the DVD Recorder, it just slips over the jack.

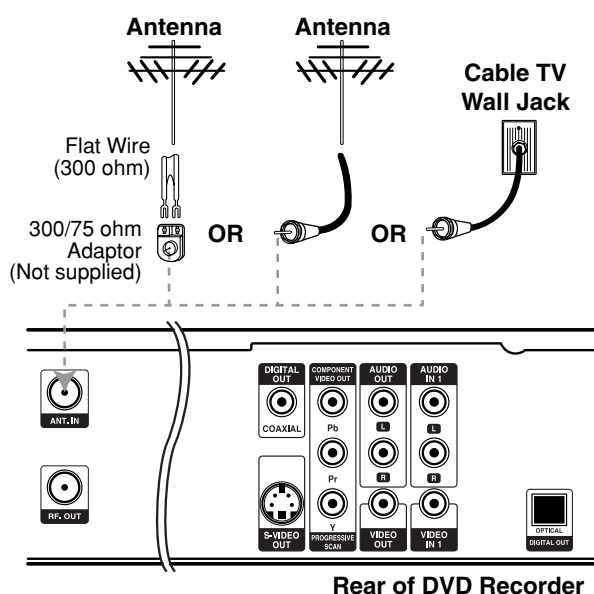

### Cable Service Without Cable Box

If your cable wire is connected to your TV without a converter or descrambler box, unscrew the wire from your TV and attach it to the ANT.IN jack on the DVD Recorder. Use the supplied round coaxial cable to connect between the DVD Recorder's RF.OUT jack and the 75 ohm antenna input jack on the TV. With this connection, you can receive all midband, super band, and hyperband channels. (All cable channels.)

### Cable Service With Cable Box

If a converter is required in your cable system, follow the instructions below:


The cable hookup permits both TV and DVD Recorder operation.

#### To view or record a CATV channel

1. Tune the TV to the correct video input channel.
2. Set the DVD Recorder channel selector to the output channel of the Cable Converter box using CH (▲ / ▼) or number (0-9) of your DVD Recorder. (Example: CH3)
3. Select the channel to view at the Cable Converter Box.

#### Note

If you are using a cable box to tune channels, it is not necessary to do EZ Channel Scan as indicated on page 20.

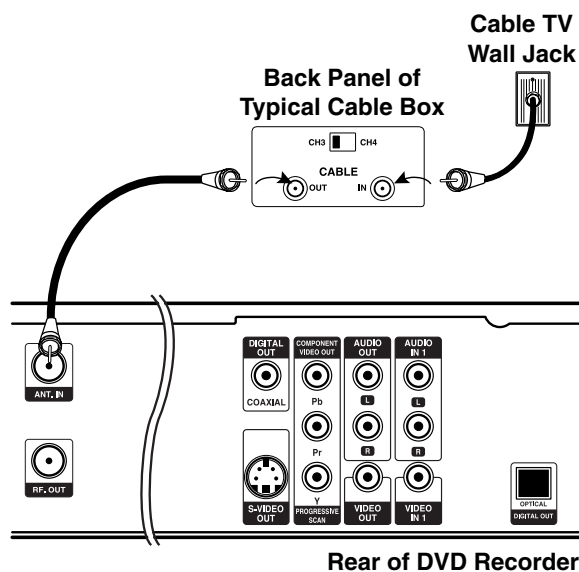

## Connections (Continued)

### Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the Recorder. Use only one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.
- For better sound reproduction, connect the Recorder's AUDIO OUT jacks to the audio in jacks on your Amplifier, Receiver, Stereo, or audio/video equipment. See "Connecting to an Amplifier" on page 18.

### Caution

- Make sure the DVD Recorder is connected directly to the TV. Tune the TV to the correct video input channel.
- Do not connect the DVD Recorder's AUDIO OUT jack to the phono in jack (record deck) of your audio system.
- Do not connect your DVD Recorder via your VCR. The DVD image could be distorted by the copy protection system.

## TV Connections

- Make one of the following connections, depending on the capabilities of your existing equipment.

### RF coaxial connection

Connect the RF.OUT jack from the DVD Recorder to the antenna in jack on the TV using the 75-ohm Coaxial Cable supplied (**R**). The RF.OUT jack passes the signal through from the ANT IN jack.

### Video connection

- 1 Connect the VIDEO OUT jack from the DVD Recorder to the video in jack on the TV using the video cable (**V**).
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the audio left/right in jacks on the TV using the audio cables (**A**).

### S-Video connection

- 1 Connect the S-VIDEO OUT jack from the DVD Recorder to the S-Video in jack on the TV using the S-Video cable (**S**).
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the audio left/right in jacks on the TV using the audio cables (**A**).

### Component Video (Color Stream®) connection

- 1 Connect the COMPONENT VIDEO OUT jacks from the DVD Recorder to the corresponding in jacks on the TV using an Y Pb Pr cable (**C**).
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the audio left/right in jacks on the TV using the audio cables (**A**).

### Progressive Scan (ColorStream® pro) connection


- If your television is a high-definition or "digital ready" television, you may take advantage of the DVD Recorder's progressive scan output for the highest video resolution possible.
- If your TV does not accept the Progressive Scan format, the picture will appear scrambled if you try Progressive Scan on the DVD Recorder.

- 1 Connect the COMPONENT VIDEO OUT jacks from the DVD Recorder to the corresponding in jacks on the TV using an optional Y Pb Pr cable (**C**).
- 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the audio left/right in jacks on the TV using the supplied audio cables (**A**).

### Notes

- Set Progressive Scan option to "ON" in the Setup menu, see page 22.
- Progressive scan does not work with the analog video connection (yellow VIDEO OUT & S-Video jacks).

### Rear of TV

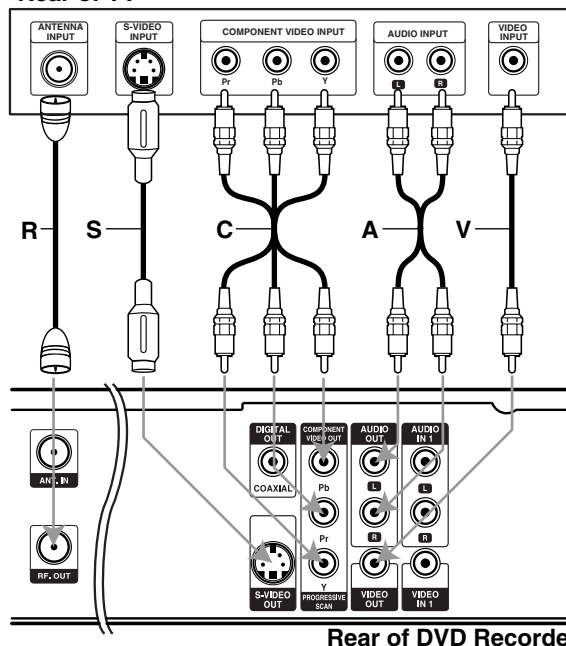

Rear of DVD Recorder

## Connections (Continued)

### Amplifier Connections

#### Connecting to an Amplifier equipped with two channel analog stereo or Dolby Pro Logic II/ Pro Logic™

Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the audio left and right in jacks on your Amplifier, Receiver, or Stereo System, using the audio cables (A).

#### Connecting to an Amplifier equipped with two channel digital stereo (PCM) or to an Audio/ Video Receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2, or DTS)

**1** Connect one of the DVD Recorder's DIGITAL AUDIO OUT jacks [OPTICAL (O) or COAXIAL (X)] to the corresponding in jack on your Amplifier. Use an optional digital (optical O or coaxial X) audio cable.

**2** You will need to activate the Recorder's digital output. (See "Audio" on page 24).

#### Digital Multi-channel sound

A digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video Receiver that supports one or more of the audio formats supported by your DVD Recorder (MPEG 2, Dolby Digital and DTS). Check the receiver manual and the logos on the front of the Receiver.




#### Caution:

Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected.



#### Notes

- If the audio format of the digital output does not match the capabilities of your Receiver, the Receiver will produce a strong, distorted sound or no sound at all.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your Receiver is equipped with a Digital Multi-channel decoder.
- To see the audio format of the current DVD in the on-screen display, press AUDIO.
- This Recorder does not perform internal (2 channel) decoding of a DTS sound track. To enjoy DTS multi channel surround, you must connect this Recorder to a DTS compatible Receiver via one of this Recorder's digital audio outputs.

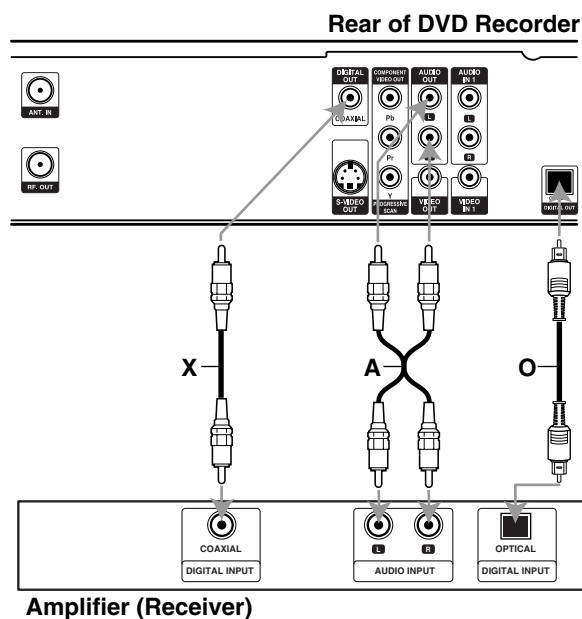

## Connections (Continued)


### Accessory Audio/Video (A/V) Connections to DVD Recorder

Connect the input jacks (AV1, AV2) from the DVD Recorder to the audio/video out jacks on your Accessory Component, using audio/video cables.

#### Note

If you use the S-VIDEO IN jack on the front panel, the VIDEO OUT jack on the front panel is not available.

Jack panel of Accessory Component  
(VCR, Camcorder, etc.)

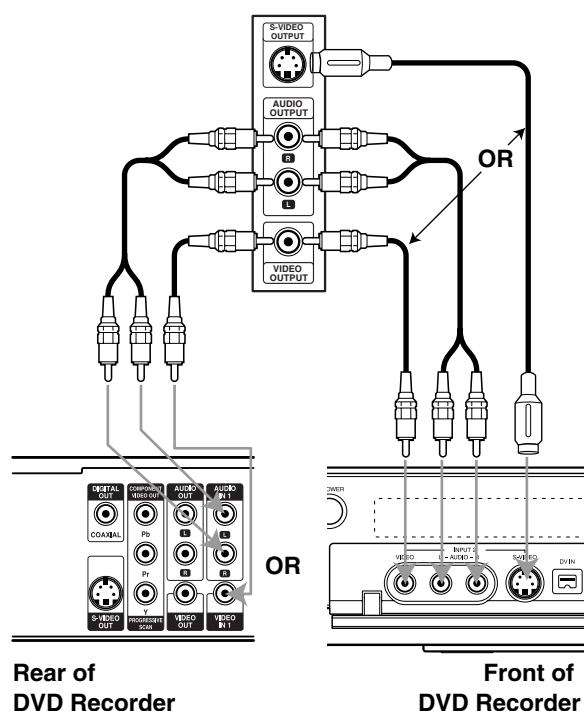

Rear of  
DVD Recorder

Front of  
DVD Recorder


### Digital Camcorder Connections

Using the front panel DV IN port, it is possible to connect a DV Digital Camcorder or Video Deck or DVD-R/RW Recorder and digitally transfer DV tapes or DVD-R/RW discs to DVD-R/RW.

Use a DV cable (not supplied) to connect the DV in/out jack of your DV Camcorder/ Video Deck to the front panel DV IN port of this Recorder.

#### Note

This jack is for connection to DV equipment only. It is not compatible with Digital Satellite Tuners, PCs or D-VHS Video Decks.

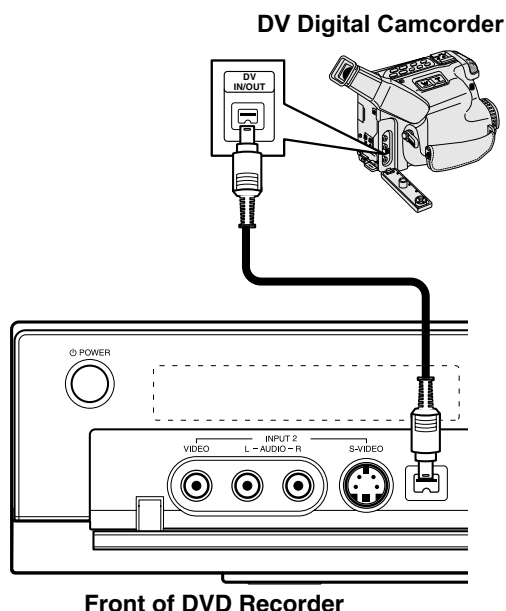

DV Digital Camcorder

Front of DVD Recorder

## Pre-operation Setup

### Menu Operation

In this menu system, there are several ways to customize the settings provided. Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings. If you press **SETUP**, only the first and second level of the menu system will appear on the TV screen. The third level can be displayed by pressing **►**. For navigating the menu levels, you will see "►" on the right side of the menu label to help you go to the next level.

#### To bring up and exit the Menu:

Press **SETUP** to bring up the menu. A second press of **SETUP** will take you back to initial screen.

#### To go to the next level:

Press **►** on the Remote Control.

#### To go back to the previous level:

Press **◀** on the Remote Control.

### Standard Menu Operation

- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the desired option.
- 3** While the desired item is selected, press **►** to move to the second level.
- 4** Use **▲ / ▼** to select the second desired option.
- 5** Press **►** to move to the third level.
- 6** Use **▲ / ▼** to select the desired setting then press **ENTER** to confirm your selection.  
Some items require additional steps.
- 7** Press **SETUP** to exit the Setup menu.


## GENERAL

### Tuning Band Select

- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the **GENERAL** option.
- 3** While the **GENERAL** option is selected, press **►** to move to the second level.
- 4** Use **▲ / ▼** to select the **Tuning Band** option.
- 5** Press **►** to move to the third level.

- 6** Use **▲ / ▼** to select the tuning band option (**TV** or **CATV**) then press **ENTER**.

*TV: If you are using a standard antenna to receive channels.  
CATV: If you are using basic cable to receive channels.*

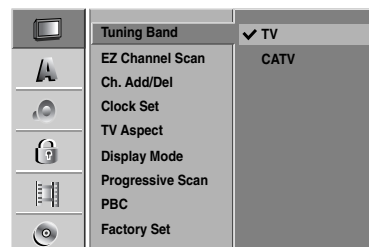


### EZ Channel Scan

This DVD Recorder is equipped with a frequency synthesized tuner capable of receiving up to 181 channels. These include VHF channels 2-13, UHF channels 14-69 and CATV channels 1-125.

#### Channel Search:

- Connect the DVD Recorder to the desired type of antenna or cable TV system, as shown in Connecting Antenna/Cable TV to DVD Recorder on page 16.

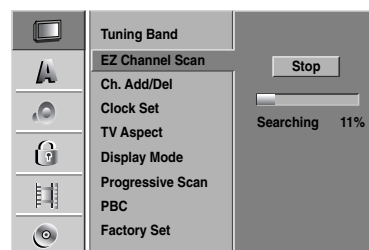


- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the **General** option.
- 3** While the **General** option is selected, press **►** to move to the second level.
- 4** Use **▲ / ▼** to select the **EZ Channel Scan** option.
- 5** Press **►** to move to the third level.  
"Start" icon is highlighted.
- 6** Press **ENTER** to begin the channel search.  
The tuner will automatically cycle through all available channels in the area (cable or antenna) and place them in the tuner's memory.

## Pre-operation Setup (Continued)


### To Add or Erase Channels from Memory

This feature allows you to add to or erase channels from memory manually.

- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the General option.**
- 3 While the General option is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the CH. Add/Del option.**
- 5 Press ► to move to the third level.**  
Edit icon is highlighted.

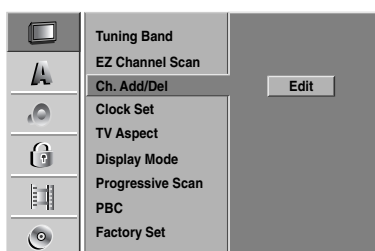

- 6 Press ENTER.**  
The Channel Edit menu appears.

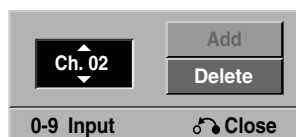

- 7 Use ▲ / ▼ or number buttons to select a channel to add or delete then press ENTER.**  
Add or Delete icon is highlighted.
- 8 Press ENTER to confirm your setting.**
- 9 Repeat steps 7-8 to add or erase additional channels.**

### Auto Clock Set

The DVD Recorder gives you two ways to set the time and date: the Auto Clock Feature or manually. The Auto Clock Feature enables the DVD Recorder to set up the clock when the DVD Recorder is turned off or during PBS channel tuning.

The Clock Set feature is set to Auto at the factory. In the ON setting, the DVD Recorder looks for a channel carrying XDS (Extended Data Services) information. XDS updates the clock using the Coordinated Universal Time.

- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the Setup menu.**
- 3 While the Setup menu is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the Clock Set option.**
- 5 Press ► to move to the third level.**
- 6 Use ▲ / ▼ to select the Auto option then press ENTER.**  
The Auto option is set at the factory. In the Auto option, the DVD Recorder looks for a channel carrying XDS (Extended Data Services) information. XDS updates the clock using the Coordinated Universal Time.



- 7 Use ► to choose the BAND option.**  
Use ▲ / ▼ to choose your TV BAND (TV or CATV).
- 8 Use ► to choose the PBS Ch. option.**  
Use ▲ / ▼ to choose your local PBS channel.
- 9 Use ► to choose the Timezone option.**  
Use ▲ / ▼ to choose your Time Zone.  
You can set your local Time Zone manually. When Timezone is set to Auto, the DVD Recorder will use XDS information to determine the proper setting.
- 10 Use ► to choose the Daylight Saving option.**  
Use ▲ / ▼ to choose Auto, On, or Off.  
You can turn Daylight Savings On or Off manually. If it is set to Auto, the DVD Recorder will use XDS information to determine the proper setting.
- 11 Press ENTER to confirm your setting, then press SETUP to exit the Setup menu.**

### Note


There are cases where the TV station does not send, or sends wrong date and/or time information and the DVD Recorder sets the incorrect time.

**If this happens, we recommend that you set the clock manually.**

## Pre-operation Setup (Continued)

### Manual Clock Set

- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the **Setup** menu.
- 3** While the **Setup** menu is selected, press **▶** to move to the second level.
- 4** Use **▲ / ▼** to select the **Clock Set** option.
- 5** Press **▶** to move to the third level.
- 6** Use **▲ / ▼** to select the **Manual** option then press **ENTER**.

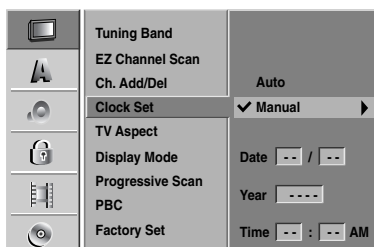


- 7** Enter the necessary information for date and time.  
 ◀ / ▶ (left/right): Moves the cursor to the previous or next column.  
 ▲ / ▼ (up/down): Changes the setting at the current cursor position.
- 8** Press **ENTER** to confirm your setting, then press **SETUP** to exit the Setup menu.

### TV Aspect

You can choose:

- 4:3: Select if a standard 4:3 TV is connected.
- 16:9: Select if a 16:9 wide TV is connected.

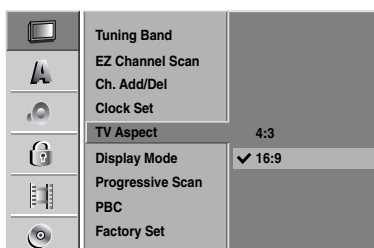


### Display Mode

Display Mode setting works only when the TV Aspect ratio is set to "4:3".

You can choose:


- Letter Box: Displays a wide picture with bands on the upper and lower portions of the screen.
- Pan Scan: Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

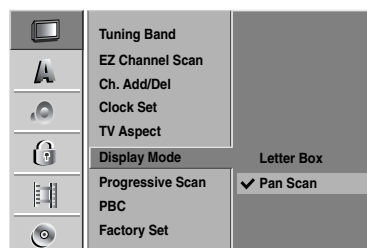

### Progressive Scan

Progressive Scan Video provides the highest quality pictures with less flickering.

- If you are using the COMPONENT VIDEO OUT jacks, but are connecting the DVD Recorder to a standard (analog) television, set Progressive Scan to OFF.
- If you are using the COMPONENT VIDEO OUT jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to ON.

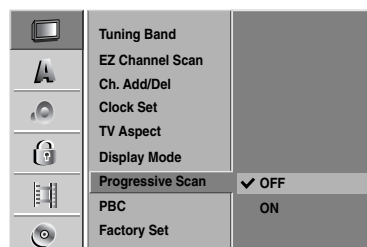

### ⚠ Caution

Once the setting for progressive scan output is entered, an image will only be visible on a progressive scan compatible TV or monitor. If you set Progressive Scan to ON in error, you must reset the unit.

- 1) Remove any disc from the unit and close the disc tray. See that "NO DISC" is displayed on the display window.
- 2) Press **STOP** and hold it for five seconds before releasing it. The video output will be restored to the standard setting and a picture will once again be visible on a conventional analog TV or monitor.




## Pre-operation Setup (Continued)

### PBC

The PBC setting can be changed. Set Playback Control (PBC) to ON or OFF.

- ON: Video CDs with PBC are played according to the PBC.
- OFF: Video CDs with PBC are played the same way as Audio CDs.

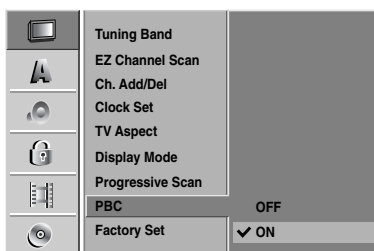


### Factory Set

If you need to, you can reset the Recorder to all its factory settings. Select "Factory Set" icon then press ENTER.

#### Note

Some options can not be reset. (Rating, Password, and Country Code)

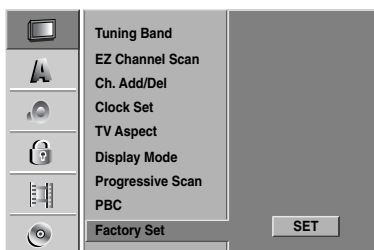

### Language

#### Display Language

Select a language for the Setup menu and on-screen display.



#### Disc Language

Select a language for the disc's Menu, Audio, and Subtitle.

- Original: The original language set for the disc is selected.
- Other: To select another language, select Other option then press ENTER. Use the numbered and ENTER buttons to key-in the corresponding 4-digit number according to the language code list on page 57. If you a mistake before pressing ENTER, press ◀ repeatedly to delete one by one and correct it.



## Pre-operation Setup (Continued)


### Audio

Each DVD disc has a variety of audio output options. Set the Recorder's Audio Output according to the type of audio system you use.

### Dolby Digital

**PCM:** Select if connected to a 2-channel digital stereo amplifier. The DVD Recorder's digital audio outputs sound in the PCM 2ch format if you play a DVD video disc recorded on the Dolby Digital recording system.


**Bitstream:** Select "Bitstream" if you connected the DVD Recorder's DIGITAL OUT jack to a Dolby Digital decoder (or an Amplifier or other equipment with a Dolby Digital decoder).

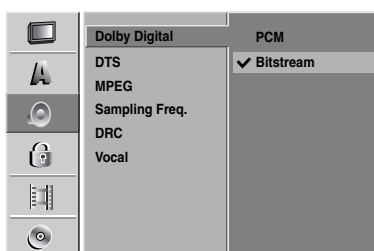

### DTS

**OFF:** If you select "OFF", the DTS signal is not output through the DIGITAL OUT jack.


**Bitstream:** Select "Bitstream" if you connected the DVD Recorder's DIGITAL OUT jack to a DTS decoder (or an Amplifier or other equipment with a DTS decoder).

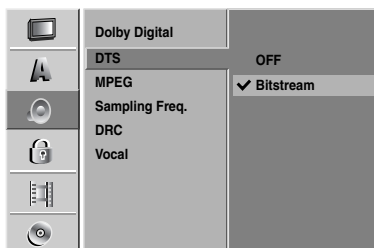

### MPEG

**PCM:** Select if connected to a 2-channel digital stereo amplifier. The DVD Recorder's digital audio outputs sound in the PCM 2ch format if you play a DVD video disc recorded on the MPEG2 recording system.


**Bitstream:** Select "Bitstream" if you connected the DVD Recorder's DIGITAL OUT jack to an MPEG decoder (or an Amplifier or other equipment with a MPEG decoder).

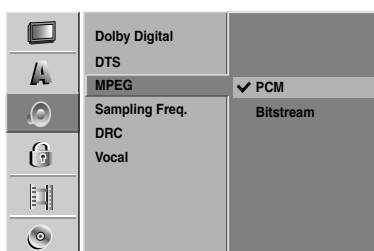

### Sampling Frequency


If your Receiver or Amplifier is NOT capable of handling 96 kHz signals, select 48 kHz. If this choice is made, this unit will automatically convert any 96 kHz signals to 48 kHz so your system can decode them.

If your Receiver or Amplifier is capable of handling 96 kHz signals, select 96 kHz. If this choice is made, this unit will pass each type of signal through without any further processing.

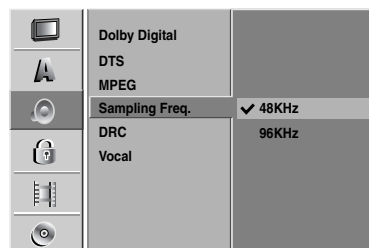


### DRC (Dynamic Range Control)

With the DVD format, you can hear a program's sound-track in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set DRC to ON for this effect.

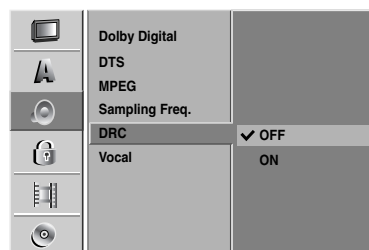

### Vocal

Set Vocal to ON only if a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into normal stereo sound.

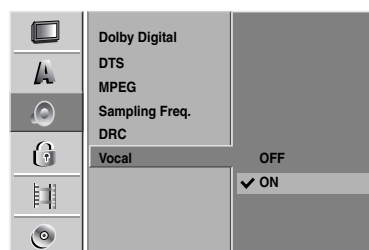

## Pre-operation Setup (Continued)

### Lock (Parental Control)

#### Set Password

##### Changing the 4-digit code



- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the **Lock** option.
- 3** While the **Lock** option is selected, press **►** to move to the second level.
- 4** Use **▲ / ▼** to select the **Set Password** option.
- 5** Press **►** to move to the third level.
- 6** If you have not entered a password yet;  
Enter a 4-digit password using the numbered buttons to create a personal 4-digit security password, then press **ENTER**. Enter the 4-digit password again and press **ENTER** to verify.  
If you have already entered a password;  
Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password, then press **ENTER**.

#### **T**ip

If you make a mistake before pressing **ENTER**, press **◀** repeatedly to delete password numbers one by one then correct it.

- 7** While “**Change**” is selected, press **ENTER**.  
If you select “**Delete**” then press **ENTER**. The password is deleted.
- 8** Enter a 4-digit password using the numbered buttons to create a personal 4-digit security password then press **ENTER**.
- 9** Enter the 4-digit password again and press **ENTER** to verify.

#### **T**ip

If you a mistake before pressing **ENTER**, press **◀** repeatedly to delete password numbers one by one then correct it.


#### If you forget your 4-digit code

If you forget your password, to clear the current password, follow the procedure below.

1. Press **SETUP** to display the Setup menu.
2. Use the Number buttons to enter the 6-digit number “210499”.
3. Select “**Yes**” then press **ENTER**. The 4-digit password is cleared. Enter a new code as shown left.

#### Rating

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from Level 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country-dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternate scenes.

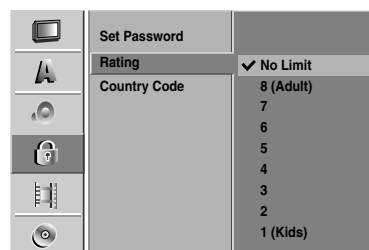


- 1** Follow steps 1-3 as shown above to the left (Set Password).
- 2** Use **▲ / ▼** to select the **Rating** option.
- 3** Press **►** to move to the third level.
- 4** Follow step 6 as shown above to the left (Set Password).
- 5** Select a rating from 1 to 8 using the **▲ / ▼** buttons. One (1) has the least playback restrictions. Eight (8) has the most playback restrictions.  
**No Limit:** If you select **No Limit**, Parental Control is not active. The disc will play in full.  
**Level 1 to 8:** Some discs contain scenes not suitable for children. If you set a rating for the Recorder, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternate scene is available on the disc. The alternate scene must have the same rating or a lower one. If no suitable alternate scene is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.
- 6** Press **ENTER** to confirm your rating selection, then press **SETUP** to exit the menu.

## Pre-operation Setup (Continued)

### Country Code

Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list (See "Country Code List", page 58.).

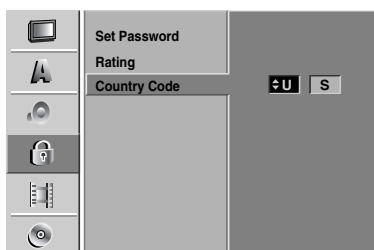

- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the **Lock** option.
- 3** While the **Lock** option is selected, press **▶** to move to the second level.
- 4** Use **▲ / ▼** to select the **Country Code** option.
- 5** Press **▶** to move to the third level.
- 6** If you have not entered a password yet;  
Enter a 4-digit password using the numbered buttons to create a personal 4-digit security password, then press **ENTER**. Enter the 4-digit password again and press **ENTER** to verify.  
If you have already entered a password;  
Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password, then press **ENTER**.




If you make a mistake before pressing **ENTER**, press **◀** repeatedly to delete password numbers one by one then correct it.

- 7** Select the first character using the **▲ / ▼** buttons.
- 8** Shift the cursor using **▶** buttons and select the second character using **▲ / ▼** buttons.
- 9** Press **ENTER** to confirm your country code selection, then press **SETUP** to exit the menu.

### Recording

#### Record Mode Set


You can set the picture quality for recording; HQ (High Quality), SQ (Standard Quality), LQ (Low Quality), EQ (Extend Quality).

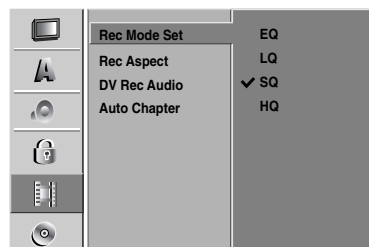

- 1** Press **SETUP**.  
The Setup menu appears.
- 2** Use **▲ / ▼** to select the **Recording** option.
- 3** While the **Recording** option is selected, press **▶** to move to the second level.
- 4** Use **▲ / ▼** to select the **Rec Mode Set** option.
- 5** Press **▶** to move to the third level.
- 6** Use **▲ / ▼** to select a desired Record Mode (HQ, SQ, LQ or EQ)
- 7** Press **ENTER** to confirm your selection, then press **SETUP** to exit the menu.

#### Record Aspect Ratio

When recording, you can set the recording aspect ratio to suit the material you're recording (16:9 widescreen, or 4:3 standard).

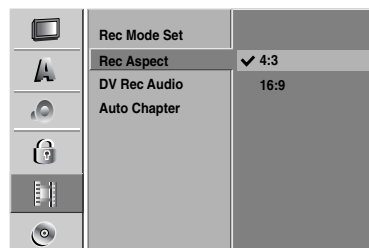

## Pre-operation Setup (Continued)


### DV Rec Audio

You need to set this if you have a camcorder using 32kHz/12-bit sound connected to the front panel DV IN port.

Some digital camcorders have two stereo tracks for audio. One is recorded at the time of shooting; the other is for over-dubbing after shooting.


On the Audio 1 setting, the sound that was recorded while shooting is used.

On the Audio 2 setting, the over-dubbed sound is used.

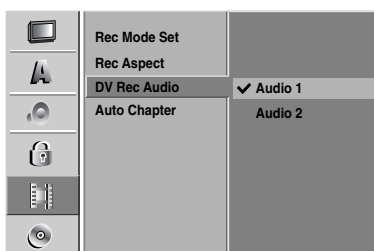

### Auto Chapter

When recording, chapter markers are put in at the specified interval. You can set this interval to 5 minutes, 10 minutes, or 15 minutes. If you select None, it switches automatic chapter marking off, no separations.

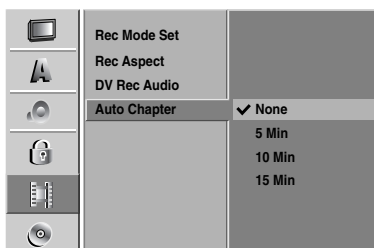

## Disc

### Disc Format

If you load a completely blank disc, the Recorder will initialize the disc.

**DVD-R:** The Recorder initializes the disc for Video mode. The recording mode will always be Video mode.

**DVD-RW:** The Recorder initializes the disc for VR mode.

**DVD+R:** The Initialization menu will appear. Select "Yes" then press ENTER.

**DVD+RW:** The Recorder initializes the disc for DVD+RW mode.

Also, you can format the disc from the Setup menu as to the right.



#### 1 Press SETUP.

The Setup menu appears.

#### 2 Use ▲ / ▼ to select the Disc option.

#### 3 While the Disc option is selected, press ► to move to the second level.

#### 4 Use ▲ / ▼ to select the Disc Format option.

#### 5 Press ► to move to the third level.


Start icon is highlighted.

#### 6 Press ENTER.

Disc Format menu appears.


#### 7 For DVD-RWs, use / B to select a Disc Format Mode (VR Mode or Video Mode) then press ENTER.

For DVD+RWs, go to step 8.

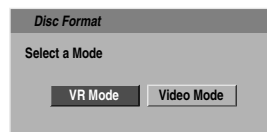

#### 8 Use ◀ / ▶ to select "Ok" then press ENTER.

It takes a few moments to format the disc.

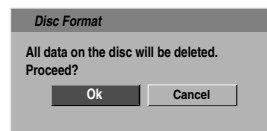


#### ⚠ Caution

**If you want to change the disc format, everything recorded on the disc will be erased.**

### Disc Protect

When recording in DVD+RW / +R disc or VR mode formatted DVD-RW disc, set to ON to prevent accidental recording, editing or deleting of the disc loaded. If you need to unlock the disc to make edits, select OFF.

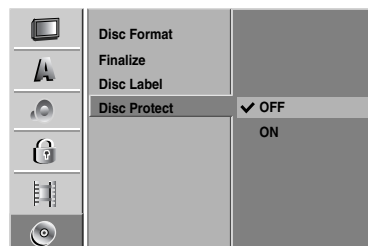

## Pre-operation Setup (Continued)


### Finalize

Finalizing 'fixes' the recordings in place so that the disc can be played on a regular DVD player or computer equipped with a suitable DVD-ROM drive.

Finalizing a Video mode disc creates a menu for navigating the disc. This is accessed by pressing MENU/LIST or TITLE.

#### Caution

After you've finalized a disc recording on a DVD-R, DVD-RW, or a DVD+R disc, you can't edit or record anything else on that disc except on a DVD+RW disc.

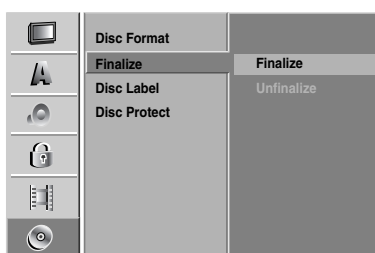


**1** Follow steps 1-3 as shown on page 27 (Disc Format).

**2** Use ▲ / ▼ to select the Finalize option.

**3** Press ► to move to the third level. Finalize is highlighted.

**4** Press ENTER. Finalize menu appears.

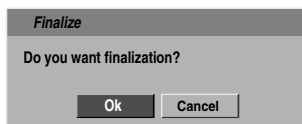

**5** Select Ok then press ENTER. The Recorder starts finalizing the disc.

#### Note

How long finalization takes depends on the type of disc, how much is recorded on the disc, and the number of titles on the disc. A heavily recorded disc can take up to 8 minutes or more to finalize.


#### Tip

If you load a DVD-RW or DVD+RW that has already been finalized, you can 'unfinalize' it by choosing Unfinalize from the Finalize menu. After doing this, you can edit and re-record onto the disc.

### Disc Label

Use this to enter a name for the disc. This name appears when you load the disc and when you display disc information on-screen.

- The disc name can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited number of characters.

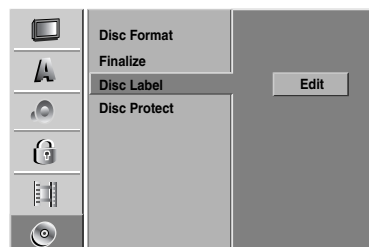

**1** Follow steps 1-3 as shown Disc Format on page 27.

**2** Use ▲ / ▼ to select the Disc Label option.

**3** Press ► to move to the third level. Edit icon is highlighted.

**4** Press ENTER. Keyboard menu appears.



**5** Enter a name for the disc. Use ▲ ▼ ◀ ▶ to select a character then press ENTER to confirm your selection.

- **Alphabet Capital:** Switches the keyboard to upper case characters.
- **Alphabet Small:** Switches the keyboard to lower case characters.
- **Symbols:** Switches the keyboard to symbol characters.
- **OK:** Select to finish.
- **Cancel:** Select to exit the menu.
- **Space:** Inserts a space at the cursor position.
- **Delete:** Deletes the previous character at the cursor position.
- **◀ / ▶:** Moves cursor to left or right.

#### Remote control buttons for entering a name

► (PLAY): Inserts a space at the cursor position.

II (PAUSE/STEP): Deletes the next character from the cursor position.

■ (STOP), CLEAR: Deletes the previous character at the cursor position.

◀◀ / ▶▶: Moves cursor to left or right.

Numbers (0-9): Enters the character of corresponding location on the selected column.


MENU/LIST, DISPLAY: Switches the keyboard type (Alphabet Capital, Alphabet Small, Symbols)

**6** Choose OK then press ENTER to save the name and return to the Setup menu.

**7** Press SETUP to exit the menu.

## Pre-operation Setup (Continued)


### Overview for the On-Screen Display

This manual gives basic instructions for operating the DVD Recorder. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD Recorder or is not available on the disc.

### Displaying Information While Watching TV

While viewing the TV channels, press **ENTER** or **DISPLAY** to display/remove the information displayed on-screen.

e.g., when a DVD-RW in VR mode is inserted.

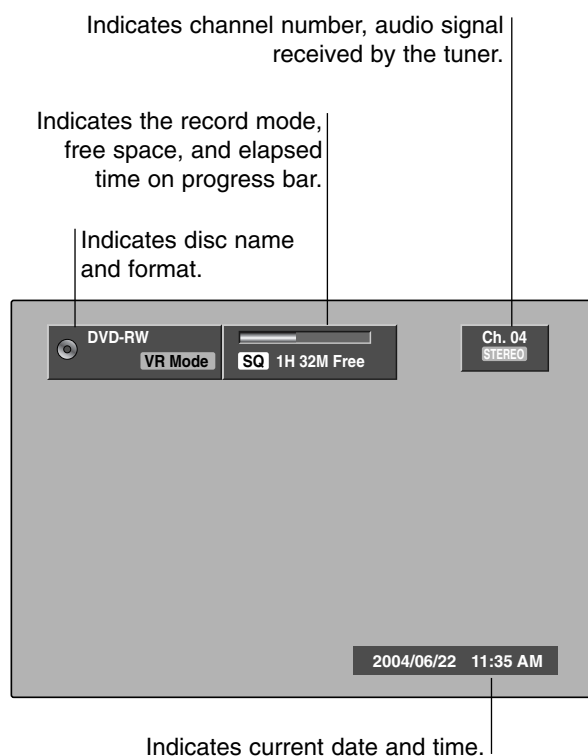

### Disc Information On-screen Display



You can display various information about the disc loaded on-screen.

**1** Press **DISPLAY** repeatedly to display/change the information displayed on-screen.

**2** To remove the On-Screen Display, press **DISPLAY** repeatedly until it disappears.

See the descriptions on the following pages for detailed explanations of displays as a disc is playing.

### Recorder Status Icon Displays

-  Resume play from this point
-  Action prohibited or not available

### Notes


- Some discs may not provide all of the features on the On-Screen Display, examples shown the following pages.
- If no button is pressed for 20 seconds, the On-Screen Display will disappear.



## Pre-operation Setup (Continued)


### Disc Information On-screenDisplay (Continued)

#### DVD

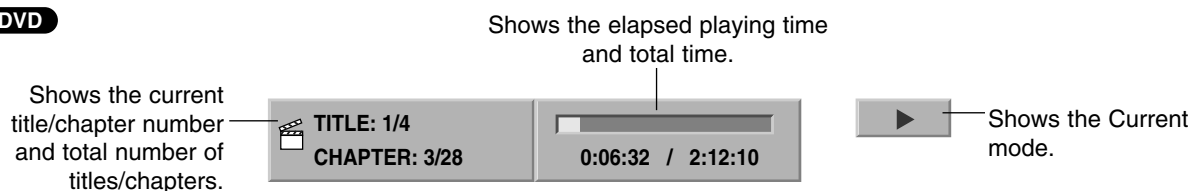

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Title Number	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Chapter Number	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	◀ / ▶, or Numbers, ENTER
Time Search	Shows the elapsed playing time, and searches the point by the elapsed time directly.	◀ / ▶, Numbers, ENTER
Audio Language and Digital Audio Output Mode	Shows the current audio soundtrack language, encoding method, and channel number, and changes the setting.	◀ / ▶
Subtitle Language	Shows the current subtitles language, and changes the setting.	◀ / ▶
Angle	Shows the current angle number, total number of angles, and changes the angle number.	◀ / ▶
Sound	Shows the current sound mode, and changes the setting.	◀ / ▶

#### VCD

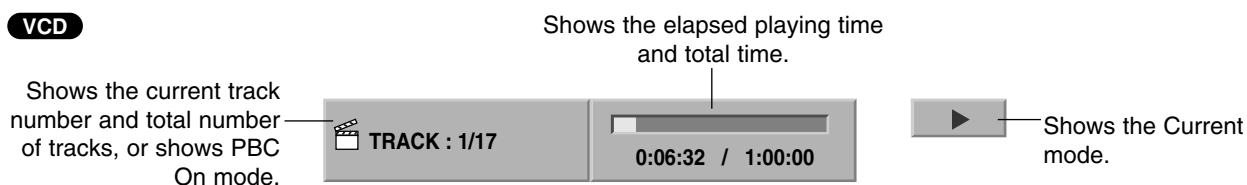

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Track Number	Shows the current track number and total number of tracks or PBC On mode, and skip to the desired track number.	◀ / ▶, or Numbers, ENTER
Time	Shows the elapsed playing time (Display only).	—
Audio Channel	Shows the audio channel, and changes the audio channel.	◀ / ▶
Sound	Shows the current sound mode, and changes the setting.	◀ / ▶

## Pre-operation Setup (Continued)

### Disc Information On-screenDisplay (Continued)

**VR**






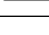
Shows the title name,  
recording date,  
recording mode, etc.  
ORG: Original  
PList: Playlist



Shows the elapsed playing time  
and total time.



Shows the Current  
mode.

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Title Number  1/6 ▶	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Chapter Number  4/26 ▶	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	◀ / ▶, or Numbers, ENTER
Time Search  0:10:30	Shows the elapsed playing time, and searches the point by the elapsed time directly.	◀ / ▶, Numbers, ENTER
Digital Audio Output Mode  1. STEREO □ □ D 2CH	Shows the current audio encoding method, channel number, and changes the setting.	◀ / ▶
Subtitle Language  OFF ▶	Shows the current subtitles language, and changes the setting.	◀ / ▶
Sound  3D SUR. ▶	Shows the current sound mode, and changes the setting.	◀ / ▶

**Video**

**+RW**

**+R**








Shows the title name,  
recording date,  
recording mode, etc.



Shows the elapsed playing time  
and total time.



Shows the Current  
mode.

 
Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Title Number  1/6 ▶	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Chapter Number  4/26 ▶	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	◀ / ▶, or Numbers, ENTER
Time Search  0:10:30	Shows the elapsed playing time, and searches the point by the elapsed time directly.	◀ / ▶, Numbers, ENTER
Digital Audio Output Mode  1. STEREO □ □ D 2CH	Shows the current audio encoding method, channel number, and changes the setting.	◀ / ▶
Subtitle Language  OFF ▶	Shows the current subtitles language, and changes the setting.	◀ / ▶
Angle (Video Mode only)  1/1	Shows the current angle number, total number of angles, and changes the angle number.	◀ / ▶
Sound  3D SUR. ▶	Shows the current sound mode, and changes the setting.	◀ / ▶

## DVD and Video CD Operation


### DVD or Video CD Playback

#### Playback Setup

- Turn the TV on and select the video input source connected to the DVD Recorder.
- Audio System: Turn the Audio System on and select the input source connected to the DVD Recorder.

**1** After turn on the Recorder, press **OPEN/CLOSE** () to open the disc tray.

**2** Load your chosen disc in the tray, with the playback side down.

**3** Press **OPEN/CLOSE** () to close the tray. **READING** appears on the display window, and playback starts automatically. If playback does not start, press **▶** (**PLAY**).  
In some cases, the disc menu might appear instead.

#### Tip


##### If a menu is displayed

A menu may be displayed first after loading a DVD or Video CD that contains a menu.

#### **DVD**

Use the **◀ ▶ ▲ ▼** buttons to select the title/chapter you want to view, then press **ENTER** to start playback. Press **TITLE** or **MENU/LIST** to return to the menu display.

#### **VCD**

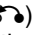- Use the number buttons to select the track you want to view.  
Press **RETURN** () to return to the menu display.
- Menu setting and the exact operating procedures for using the menu may differ depending on the disc. Follow the instructions on each menu screen. You may also set **PBC** to **OFF** in the Setup menu. See page 23.

#### Notes

- If Parental Control is set and the disc is not within the Rating settings (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see “Rating”, on page 25).
- DVDs may have a Region Code.  
Your Recorder will not play discs that have a region code different from your Recorder. The region code for this Recorder is 1 (one).

### General Features

#### Note

Unless stated otherwise, all operations described use the Remote Control. Some features may also be available on the Setup menu.

#### TITLE Selection 1/6 ▶

**DVD** **Video** **VR** **+RW** **+R**

If a disc has more than one title, you can move to another title as follows:

- Press **DISPLAY** then use **▲ / ▼** to select the title icon. Then, press the appropriate numbered button (0-9) or **◀ / ▶** to select a title number.

#### CHAPTER/TRACK Selection

 4/26 ▶  1/4 ▶

**DVD** **Video** **VR** **+RW** **+R** **VCD**

If a title on a disc has more than one chapter/track, you can move to another chapter/track as follows:

- Press **SKIP** (**◀◀** or **▶▶**) briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press **SKIP** (**◀◀**) twice briefly to step back to the previous chapter/track.
- To go directly to any chapter/track during playback, press **DISPLAY**. Then, use **▲ / ▼** to select chapter icon (or for a Video CD, select track icon). Then, enter the chapter/track number using the numbered buttons (0-9) or press **◀ / ▶**.

#### Search

**DVD** **Video** **VR** **+RW** **+R** **VCD**

1. Press **SCAN** (**◀◀** or **▶▶**) during playback. The Recorder will enter **SEARCH** mode.
2. Press **SCAN** (**◀◀** or **▶▶**) to select the required speed: **◀** (Reverse play), **◀◀X2**, **◀◀X4**, **◀◀X8**, **◀◀X16**, **◀◀X100** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8**, **▶▶X16**, **▶▶X100** (forward).  
With a Video CD, the Search speed changes: **◀◀X2**, **◀◀X4**, **◀◀X8** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8** (forward).
3. To exit **SEARCH** mode, press **▶** (**PLAY**).

#### Still Picture and Frame-by-Frame Playback

**DVD** **Video** **VR** **+RW** **+R** **VCD**

1. Press **PAUSE/STEP** (**||**) during playback. The Recorder will enter **PAUSE** mode.
2. You can advance or back up the picture frame-by-frame by pressing **◀ / ▶** repeatedly during **PAUSE** mode.
3. To exit **PAUSE** mode, press **▶** (**PLAY**).

#### Note

The picture frame-by-frame feature in reverse is not available for Video CDs.

#### Tip

You can advance the picture frame-by-frame by pressing **PAUSE/STEP** (**||**) repeatedly on the Remote Control.

## DVD and Video CD Operation (Continued)

### General Features (Continued)

#### Slow Motion

**DVD** **Video** **VR** **+RW** **+R** **VCD**

1. Press PAUSE/STEP (II) during playback.  
The Recorder will enter PAUSE mode.
2. Press SCAN (◀◀ or ▶▶) during PAUSE mode.  
The DVD Recorder will enter SLOW mode.
3. Use the SCAN (◀◀ or ▶▶) to select the required speed: ◀◀ 1/16, ◀◀ 1/8, ◀◀ 1/4, or ◀◀ 1/2 (backward), or ▶▶ 1/16, ▶▶ 1/8, ▶▶ 1/4, or ▶▶ 1/2 (forward).  
With a Video CD, the Slow speed changes: ▶▶ 1/8, ▶▶ 1/4 or ▶▶ 1/2 (forward).
4. To exit Slow Motion mode, press ▶ (PLAY).

#### Note

Slow motion playback in reverse is not possible with Video CDs.

#### Random **Karaoke DVD** **VCD**

1. Press RANDOM during playback.  
The unit automatically begins Random Playback and "RANDOM" appears on the TV screen.
2. To return to normal playback, press RANDOM until "NORMAL" appears on the TV screen.

#### Tip

By pressing SKIP ▶▶ during Random playback, the unit selects another title (track) and resumes Random playback.

#### Note

- This function only works with DVD Karaoke discs or Video CDs without PBC.
- On a Video CD with PBC, you must set PBC to OFF in the Setup menu to use the Random function. See page 23.

#### Repeat Chapter

**DVD** **Video** **VR** **+RW** **+R** **VCD**

#### DVD Discs - Repeat Chapter/Title/All/Off

Press REPEAT to select a desired repeat mode.

- Chapter: repeats the current chapter.
- Title: repeats the current title.
- All: repeats the all titles on the disc.  
(VR mode DVD-RW disc only)
- OFF: does not play repeatedly.

#### Video CDs - Repeat Track/All/Off

Press REPEAT to select a desired repeat mode.

- Track: repeats the current track.
- All: repeats the all tracks on the disc.
- OFF: does not play repeatedly.

#### Note

On a Video CD with PBC, you must set PBC to OFF in the Setup menu to use the Repeat function. See page 23.

#### Repeat A-B A - B

**DVD** **Video** **VR** **+RW** **+R** **VCD**

To repeat a sequence in a title:

1. Press A-B at your chosen starting point.  
Repeat icon and 'A-' appears on the TV screen.
2. Press A-B again at your chosen ending point.  
Repeat icon and 'A-B' appears on the TV screen, and the repeat sequence begins.
3. To cancel the sequence, press A-B repeatedly to select OFF.

#### Time Search 0:10:30

**DVD** **Video** **VR** **+RW** **+R**

The Time Search function allows you to start playback at any chosen time on the disc.

1. Press DISPLAY twice during playback. The On-Screen Display appears on the TV screen.  
The Time Search box shows the elapsed playing time of the current disc.
2. Within 20 seconds, use ▲ / ▼ to select the Time Search icon in the On-Screen Display.  
The "0:00:00" display appears in the Time Search box.
3. Within 20 seconds, use the number buttons to enter the required start time. Enter hours, minutes, and seconds from left to right in the box.  
You can not enter an invalid time.  
If you enter the wrong numbers, press ◀ / ▶ to move the under bar ( ) to the wrong number. Then enter the correct numbers.
4. Within 20 seconds, press ENTER to confirm the start time.  
Playback starts from the selected time on the disc.

## DVD and Video CD Operation (Continued)

### General Features (Continued)

#### Zoom

**DVD** **Video** **VR** **+RW** **+R** **VCD**

The Zoom function allows you to enlarge the video image and to move through the enlarged image.

1. Press ZOOM during playback or still playback to activate the Zoom function.  
Each press of the ZOOM button changes the TV display in the sequence shown below.  
x1 size → x2 size → x4 size → x1 size (normal size)
2. Use the ◀ ▶ ▲ ▼ buttons to move through the zoomed picture.
3. To resume normal playback, press CLEAR or press ZOOM repeatedly until the normal picture appears.

#### Note

The Zoom function may not work for some DVDs.

#### Marker Search

**DVD** **Video** **VR** **+RW** **+R** **VCD**


You can start playback from a memorized point. Up to six points can be memorized.

To enter a mark, follow these steps.

1. During disc playback, press MARKER when playback reaches the spot that you want to memorize.  
The Marker icon will appear on the TV screen briefly.
2. Repeat step 1 to enter up to six Marker points on a disc.

#### To Recall a Marked Scene

1. During disc playback, press SEARCH.  
The Marker Search menu will appear on the TV screen.
2. Use the ◀ ▶ ▲ ▼ buttons to select the Marked scene that you want to recall.
3. Press ENTER.  
Playback will start from the Marked scene.
4. To remove the Marker Search menu, press RETURN (↵).

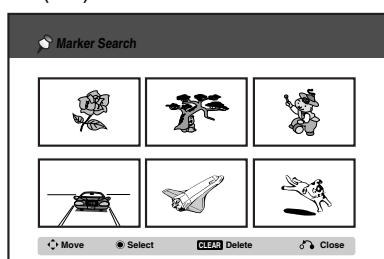

#### To clear Marked Scenes

1. Press SEARCH during playback or in Stop mode.  
The Marker Search menu will appear on the TV screen.
2. Use ◀ ▶ ▲ ▼ to select the Marked scene that you want to erase.

3. Press CLEAR.  
“Delete selected marker? Proceed?” message appears.
4. Use ◀ / ▶ to select “Yes” then press ENTER.
5. Repeat steps 2-4 to erase additional Marked scene.
6. To remove the Marker Search menu, press RETURN (↵).

### Reviewing the Contents of DVD Video Discs: Menus

DVDs may contain menus that allow you to access special features. To open the disc menu, press MENU/LIST. Then, press the appropriate number button to select an option. Or, use the ◀ ▶ ▲ ▼ buttons to highlight your selection, then press ENTER.

#### Title Menu **DVD**

1. Press TITLE.  
If the current title has a menu, the menu will appear on the TV screen. Otherwise, the disc menu may appear.
2. The menu may contain camera angles, spoken language and subtitle options, and chapters for the title.

#### Disc Menu **DVD**

1. Press MENU/LIST.  
The disc menu is displayed.
2. To remove the disc menu, press MENU/LIST again.

#### Camera Angle 1/3 **DVD**


If the disc contains scenes recorded at different camera angles, you can select a different camera angle during playback.

- Press ANGLE then press ◀ / ▶ repeatedly during playback to select the desired angle.  
The number of the current angle appears on the TV screen.

#### Tip

The ANGLE indicator will blink on the TV screen at scenes recorded at different angles to indicate that other angles are available on the disc.

### Changing the Audio Soundtrack

 1. ENG ▶ **DVD**  
□ □ D 5.1CH

 
Press AUDIO then press ◀ / ▶ repeatedly during playback to hear a different audio language or audio soundtrack if available.

#### Note

Some discs feature both Dolby Digital and DTS soundtracks. There is no analog audio output when DTS is selected. To listen to the DTS soundtrack, connect this Recorder to a DTS decoder via one of the digital outputs. See page 18 for connection details.

## DVD and Video CD Operation (Continued)

### Audio Channel Selection



**VCD** **Video** **VR** **+RW** **+R**

Press AUDIO then press ◀ / ▶ repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).

### 3D Surround



**DVD** **Video** **VR** **+RW** **+R** **VCD**

This unit can produce a 3D Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a Home Theater System.

1. Press 3D SURR. then press ◀ / ▶ repeatedly during playback to select "3D SUR."
2. To turn off the 3D Surround effect, select "NORMAL".

### Subtitles



**DVD** **Video** **VR** **+RW** **+R**

Press SUBTITLE then press ◀ / ▶ repeatedly during playback to see the different subtitle languages.

### Instant Skip

**DVD** **Video** **VR** **+RW** **+R**

Each press INSTANT SKIP skips forward 15 seconds.



If ☹ appears, the feature is not available on the disc.

### Finding Locations on a Disc **VCD**

You can directly access any point on a Video CD using this function. Use this function only while a Video CD is playing. Playback jumps to the point specified.

1. Press SEARCH during playback.  
The progress bar appears on the TV screen.



2. Use ◀ / ▶ to find a start position for playback.
3. Press ENTER to confirm the selected position.  
Playback starts from the selected position.



This function works only when there are no markers memorized.

### Last Condition Memory

**DVD** **Video** **VR** **+RW** **+R**

This Recorder memorizes the user settings for the last disc that you have viewed. Settings remain in memory even if you remove the disc from the Recorder or switch off the Recorder. If you load a disc that had its settings memorized, the latest stop position is automatically recalled.




- Settings are stored in memory for use any time.
- This Recorder does not memorize settings for a disc if you switch off the Recorder before commencing to play the disc.

### PIP (Picture-in-Picture)

**DVD** **Video** **VR** **VCD** **+RW** **+R**

This function enables you to view the stored stations in the sub picture during playback.

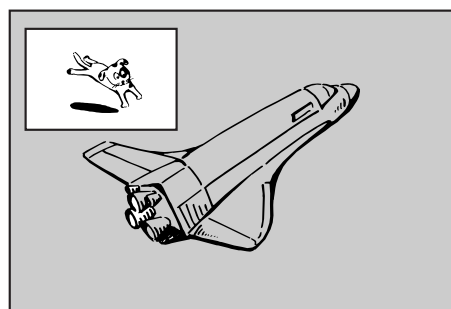

#### Turning PIP On and Off

Press PIP to switch on the sub picture, press PIP again to switch it off.

#### Input source selection for sub picture

Press INPUT to select the input source for the sub picture. Each time INPUT is pressed, each input source available for the sub picture is displayed as shown below.

Tuner → AV1 → AV2

#### Program selection for sub picture

Use ▲ / ▼ to change the program if sub picture's input source is Tuner. The selected program number is displayed on the TV screen. You can view the selected program by pressing STOP (■).

#### Sub picture position change

Press ◀ / ▶ repeatedly until desired position is achieved. The sub picture moves clockwise or counterclockwise.

#### Zoom Sub picture

Press ZOOM repeatedly to enlarge the sub picture, the magnification level increases up to three steps.

## Audio CD and MP3 Operation

### Audio CD or MP3 Disc Playback

#### CD MP3


The DVD Recorder can play Audio CDs. Also, the DVD Recorder can play MP3 formatted recordings on CD-ROM, CD-R, or CD-RW discs.

Before playing MP3 recordings, read the notes on MP3 Recordings on page 37.

- 1 Insert a disc and close the tray.**  
AUDIO CD or MP3 CD menu appears on the TV screen.



AUDIO CD Menu

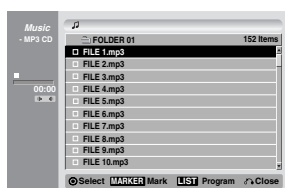

MP3 CD Menu

- 2 Use ▲ / ▼ to select a track then press ► (PLAY).**  
Playback starts.  
During playback, the current track's elapsed playing time will appear on the display window and menu.  
Playback will stop at the end of the disc.

#### Tips

- You can view either TV channels or a video input source by pressing INPUT repeatedly. If you want to return to the Music menu, press MENU/LIST.
- You can switch between the Track List and Program List menus by pressing MENU/LIST.
- On the Music-MP3 CD menu, press SCAN (◀◀ or ▶▶) to move to the previous or next page.
- On CDs with mixed content (audio tracks, MP3 files, and JPEG files), you can select among the Music-Audio CD menu, Music-MP3 CD menu, and Photo CD menu by pressing TITLE repeatedly.

- 3 To stop playback at any other time, press STOP (■).**

### Music menu options

- To display menu options, select a track (or folder) on the menu then press ENTER.
- Use ▲ / ▼ to select an option then press ENTER to confirm your selection.

### Music-Audio CD menu options **CD**

#### Play

**Play:** Starts playback the selected track.

#### Program Add

**Program Add:** Adds the track(s) to Program List. (page 38)

### Music-MP3 CD menu options **MP3**

- If you select a track.

#### Play

**Play:** Starts playback the selected track.

#### Program Add

**Program Add:** Adds the track(s) to Program List. (page 38)

#### Folder

**Folder:** Displays the folder list on the disc.

#### View All

**View All:** Displays all MP3 files on the disc.

- If you select a folder.

#### Open

**Open:** Displays sub-folders and MP3 files only in the folder.

#### Program Add

**Program Add:** Adds all track(s) in the folder to Program List. (page 38)

#### Folder

**Folder:** Displays the folder list on the disc.

#### View All

**View All:** Displays all MP3 files on the disc.



## Audio CD and MP3 Operation (Continued)

### Pause **CD** **MP3**

1. Press PAUSE/STEP (II) during playback.
2. To return to playback, press ► (PLAY) or press PAUSE/STEP (II) again.

### Track Selection **CD** **MP3**

- Press SKIP I◀◀ or ▶▶I briefly during playback to go to the next track or to return to the beginning of the current track.
- Press SKIP I◀◀ twice briefly to step back to the previous track.
- On an Audio CD, to go directly to any track, enter the track number using the numbered buttons (0-9) during playback on the Track List.

### Repeat Track/All(Folder)/Off **CD** **MP3**

Press REPEAT to select a desired repeat mode.

- TRACK: repeats the current track.
- ALL (CD): repeats the all tracks on the disc.
- FOLDER (MP3): repeats the all tracks in the current folder.
- OFF (No display): does not play repeatedly.

### Random **CD** **MP3**

1. Press RANDOM during playback or in Stop mode. The unit automatically begins Random Playback and "RANDOM" appears on the menu display.
2. To return to normal playback, press RANDOM repeatedly until "RANDOM" disappears from the menu display.



By pressing SKIP ▶▶I during Random playback, the unit selects another track and resumes Random playback.

### 3D Surround **CD** **MP3**

This unit can produce 3D Surround effects, that simulate multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a Home Theater System.

1. Press 3D SURR. during playback to select "3D SUR".
2. To turn the 3D Surround effect off, press 3D SURR. until "3D SUR" disappears from the menu display.

### Changing the Audio Channel

#### **CD** **MP3**

Press AUDIO repeatedly to hear a different audio channel (stereo, left, or right).

### Search **CD**

1. Press SCAN (◀◀ or ▶▶) during playback. The Recorder will enter SEARCH mode.
2. Press SCAN (◀◀ or ▶▶) to select the required speed: ◀◀X2, ◀◀X4, ◀◀X8 (backward) or ▶▶X2, ▶▶X4, ▶▶X8 (forward). Search speed and direction are indicated on the menu display.
3. To exit SEARCH mode, press ► (PLAY).

### Repeat A-B **CD**

To repeat a sequence in a track:

1. Press A-B at your chosen starting point. Repeat icon and 'A' appears on the menu screen.
2. Press A-B again at your chosen ending point. The Repeat icon and 'A - B' appears on the menu screen, and the repeat sequence begins.
3. To exit the sequence and return to normal play, press A-B again. The Repeat icon disappears from the menu screen.

## Notes on MP3 Recordings

### About MP3

- An MP3 file is audio data compressed by using the MPEG1 audio layer-3 file-coding scheme. We call files that have the ".mp3" file extension "MP3 files".
- The Recorder can not read an MP3 file that has a file extension other than ".mp3".

### MP3 Disc compatibility with this Recorder is limited as follows:

1. CD-R physical format should be "ISO 9660" and "JOLIET".
2. If you record MP3 files using the software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it is impossible to playback MP3 files. We recommend that you use "Easy-CD Creator", which creates an ISO9660 or JOLIET file system.
3. Total number of files and folders on the disc should be less than 999.

This DVD Recorder requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files) that require certain pre-existing conditions (see above) to insure compatible playback.

**Customers should also note that permission is required in order to download MP3 files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.**

## Audio CD and MP3 Programmed Playback

The Program function enables you to store your favorite tracks from any disc in the Recorder memory. Program can contain 99 tracks (Audio CD) or 256 tracks (MP3).

- 1** Insert an Audio CD or MP3 disc.  
Audio CD or MP3 CD menu will appear.
- 2** Use ▲ / ▼ to select a track (or folder).

### Selecting multiple tracks (folders)


- a. Press MARKER.  
A check mark appears on the track or folder. Press MARKER again to cancel the marked track or folder.
- b. Repeat step 1 to mark additional tracks (folders).

- 3** Press ENTER.  
The options appear on the left side of the menu.

- 4** Use ▲ / ▼ to select the "Program Add" option then press ENTER.

- 5** Repeat steps 2-4 to place additional tracks on the Program list.

- 6** Press MENU/LIST to display Program List menu.  
You can switch between the Track List and Program List menus by pressing MENU/LIST.

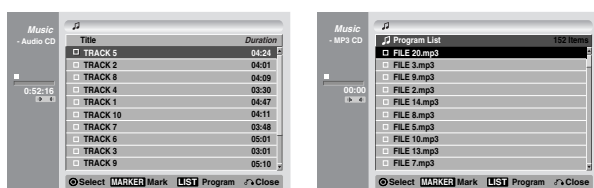

- 7** Use ▲ / ▼ to select the track you want to start playing on the Program List menu.



On the Music-MP3 CD menu, press SCAN (◀◀ or ▶▶) to move to the previous or next page.

- 8** Press ► (PLAY).  
Playback begins in the order in which you programmed the tracks.  
Playback stops after playing the last programmed track on the Program List.

### Program List menu options CD MP3

1. To display menu options, select a track on the Program List menu then press ENTER.  
The menu options appear on the left side of the menu.
2. Use ▲ / ▼ to select an option then press ENTER to confirm your selection.

<b>Play</b>
<b>Move</b>
<b>Delete</b>
<b>Delete All</b>

**Play:** Playback begins in the order in which you programmed the tracks from the selected track.

**Move:** Moves the track(s) to change the program order.

**Delete:** Deletes the track(s) from the Program List menu.

**Delete All:** Deletes all tracks from the Program List menu.

### Repeat Programmed Tracks

Press REPEAT repeatedly during playback to select a desired repeat mode.

- TRACK: repeats the current track.
- ALL : repeats the all tracks on the Program list.
- OFF (No display): does not play repeatedly.

### Erasing a Track from the Program List

1. Select the track to erase from the Program List.




Use the MARKER button to select multiple tracks.

2. Press ENTER.  
The menu options appear on the left side of the menu.
3. Select 'Delete' option then press ENTER.  
The selected track is removed from the Program List.



Use "Delete All" option to remove all tracks.

### Changing Track Order in the Program List

1. Select the track you wish to move.
- 
- Use the MARKER button to select multiple tracks.
2. Press ENTER.  
The menu options appear on the left side of the menu.
  3. Select 'Move' option then press ENTER.  
A yellow bar appears in the Program List.
  4. Use ▲ / ▼ to move the yellow bar to the desired location, then press ENTER.  
The selected track is moved.

### Save Your Program List MP3


This Recorder automatically memorizes the user program list for the disc that you have programmed. Program list remains in memory even if you remove the disc from the Recorder or switch the Recorder off. If you load a disc that has its program list memorized, the program list is automatically recalled.

## JPEG File Operation

### Viewing JPEG Files **JPEG**

The Recorder can play discs with JPEG files.  
Before playing JPEG files, read "Notes on JPEG Files" below right.

- 1 Insert a disc and close the tray.**  
The Photo menu appears on the TV screen.

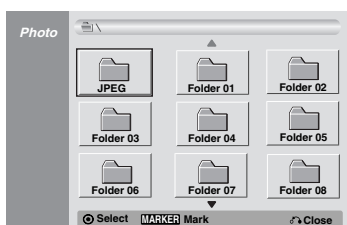

- 2 Use ▲▼◀▶ to select a folder, then press ENTER.**  
A list of files in the selected folder appears.



#### Note


If the icon appears on the Photo menu, it means you cannot view those JPEG files.

- 3 Use ▲▼◀▶ to select a file, then press ENTER.**  
The options appear on the left side of the menu.

#### Tip

- If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight the icon and press ENTER.
- You can select TV channels or a video input source by pressing INPUT repeatedly. If you want to return to the Photo menu, press MENU/LIST.
- On the Photo menu, press SKIP (◀◀ or ▶▶) to move to the previous or next page.
- On CDs with mixed content (audio tracks, MP3 files and JPEG files), you can select among the AUDIO CD menu, MP3 CD menu, and Photo CD menu by pressing TITLE repeatedly in Stop mode.

- 4 Use ▲ / ▼ to select "Full View" option then press ENTER.**

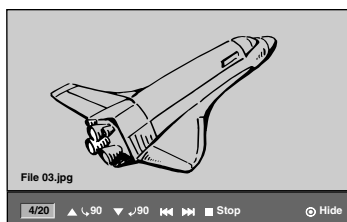

- 5 To stop viewing at any time, press STOP.**  
The Photo menu reappears.

### Skip Images


While viewing a picture, press SKIP (◀◀ or ▶▶) once to advance to the next file or return to the previous file.

### Rotate Images

Use ▲ / ▼ while viewing a picture to flip the picture clockwise or counterclockwise.

### View Slide Shows

1. Select the "Slide Show" option on the Photo menu.
2. Press ENTER.  
The Slide Show menu appears.

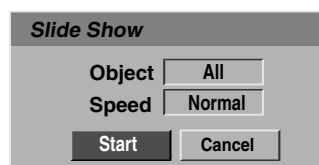

3. Use ▲▼◀▶ to set the options.  
Object: Selected file or All files.  
Speed: Sets the speed for Slide Show (Slow, Normal, or Fast)
4. Select the Start option then press ENTER to start the Slide Show.
5. Press STOP to stop the Slide Show and returns to the Photo menu.

#### Note

Use the MARKER button to select multiple files.

### Notes on JPEG Files

- Depending on the size and number of JPEG files, it may take several minutes for the Recorder to read a disc's content. If you don't see an On-Screen Display after several minutes, some of the files are too big — reduce the resolution of the JPEG files to less than 4 mega pixels and burn another disc.
- The total number of files and folders are not restricted but the total number of files on the folder should be less than 999.
- Some discs may be incompatible due to different recording formats or the condition of the discs.
- If you are using software such as "Easy CD Creator" to burn JPEG files on a CD-R, ensure that all selected files have the ".jpg" or ".jpeg" extension before copying them into the CD layout.
- If the files have ".jpe" extensions, please rename them as ".jpg" or ".jpeg" files.
- File names without the ".jpg" or ".jpeg" extension cannot be read by this Recorder, even though the files are shown as JPEG image files in Windows Explorer®.

## Basic Recording

### Basic Recording from TV channels

Follow the instructions below to record a TV program. Recording starts immediately and continues until the disc is full or you stop the recording.

**1 Switch on the Recorder and load a recordable disc.**

Also make sure that the TV's input source is set to this Recorder. If you load a completely blank disc, the Recorder takes a short while to initialize the disc.

**2 Set a recording mode as necessary by pressing REC MODE repeatedly. (HQ, SQ, LQ, EQ)**

Recordable time:

HQ (High Quality); Approx. 1 hour

SQ (Standard Quality); Approx. 2 hours

LQ (Low Quality); Approx. 4 hours

EQ (Extended Quality); Approx. 6 hours

**3 Use ▲ / ▼ buttons to select the TV channel to record.**



#### Changing TV Audio Channel

You can select the audio channel (language) to listen to by pressing AUDIO while viewing a TV program (Stereo, SAP, Mono). The current audio channel is displayed on-screen.

- If the sound is of poor quality when set to Stereo, you may often improve it by changing to Mono.

**4 Press REC (●) once.**

Recording will start. (The REC indicator lights in the display window.)

- Recording continues until you press STOP (■) or the disc is full.
- To record for a fixed length of time, see Instant Timer Recording on right.

**5 Press STOP (■) to stop recording.**

### To Pause the Recording

1. Press PAUSE/STEP (II) to pause the disc during recording.
2. When you want to continue recording, press PAUSE/STEP (II).

### To record one TV program while watching another

Using the TV, select the channel to be viewed during recording.

### Instant Timer Recording

Instant Timer Recording allows you to make a recording easily of a preset length without using the program timer.

**1 Follow steps 1-4 as shown left (Basic Recording from a TV channels).**

**2 Press REC (●) repeatedly to select the recording time length.**

Recording starts after the first press. Each additional press increases the recording time by 10 minutes within the available free space. The recording time is displayed on the TV screen. At the end of the recording, the DVD Recorder will stop recording and shut off.



Instant Timer Recording Menu

### Checking the Recording Time

Press REC (●) once to check the recording time. The recalled setting will be displayed on the TV screen for a moment.

Also, remaining time for the recording is shown in the display window.

### To Extend the Recording Time

The recording time can be extended anytime by pressing REC (●).

Each additional press increases the recording time by 10 minutes within the available free space.




#### Caution

If the Recorder is unplugged (or there is a power failure) while the Recorder is recording, the recording will be lost.

## Timer Recording

This DVD Recorder can be programmed to record up to 8 programs over a period of 1 month. For unattended recording, the timer needs to be set with the channels to be recorded, the starting time and length.

- 1 Press TIMER REC.**  
The Timer Record menu will appear.

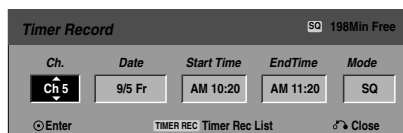

- **Ch** – Choose a memorized program number, or one of the external inputs from which to record.
- **Date** – Choose a date up to 1 month in advance.
- **Start Time** – Set the recording starting time.
- **End Time** – Set the recording ending time.
- **Mode** – Choose a record mode (HQ, SQ, LQ, EQ, or AT).  
AT (Auto) mode determines how much disc time is available and switches record mode, if necessary, to complete recording the program.

- 2 Enter the necessary information for your timer recording(s).**

- ◀ / ▶ (left/right) – moves the cursor left/right
- ▲ / ▼ (up/down) – changes the setting at the current cursor position
- Press RETURN (↵) to exit the Timer Record menu.
- Press ENTER after filling in all the program information.
- Press TIMER REC to display Timer Record List.

- 3 Press ENTER, the program will be memorized by the DVD Recorder.**

To check the programming, the Timer Record List will appear.

Check field's "Rec. OK" on the Timer Record List indicates that the timer recording is programmed correctly and a recordable disc is inserted.

- 4 Press RETURN (↵) to exit the Program List.**

- 5 Make sure that you load a recordable disc and press POWER to switch your unit to Standby.**

### Notes

- The timer indicator lights in the display window if the Recorder is in standby with the timer active.
- You must press POWER to stop the timer recording.

## Reviewing Timer Recording Details

Programming can be checked whenever the DVD Recorder is turned on. Press TIMER REC twice.

- Use ▲ / ▼ to select a timer recording.
- Press **ENTER** to edit the selected program. Timer Record menu appears.
- Press **CLEAR** to remove the selected program from the Timer Record List.



## Canceling a Timer Recording

You can clear a timer setting anytime before the recording actually starts.

- Use ▲ / ▼ to select a program you want to remove on the Timer Recorder List. If you want to remove the program, press CLEAR.

## Stopping a Timer Recording in Progress

After a timer recording has started, you can still cancel the program.

- Press POWER.

## Timer Recording Troubleshooting

**Even though the timer is set, the Recorder will not record when:**

- There is no disc loaded.
- A non-recordable disc is loaded.
- Disc Protect is set to ON in the Setup menu (see page 27).
- Power is turned on.
- There are already 99 titles recorded on the disc.

**You cannot enter program for a timer recording if:**

- A recording is already underway.
- The time you're trying to set has already passed.
- There are already 8 timer programs set.

**If two or more timer programs overlap:**

- The earlier program takes priority.
- After the earlier program finishes, the later program starts.
- If two programs are set to start at exactly the same time, the program entered first takes priority.

If the disc is damaged, the recording may not be completed successfully. In this case even though the Check field shows "Rec. OK", it may not be.

## Recording from an External Input Source

### Recording from External Components

You can record from an external A/V device, such as a camcorder or VCR, connected to any of the Recorder's external inputs.

- 1 Make sure that the component you want to record from is connected properly to the DVD Recorder. See page 19.**
- 2 Press INPUT repeatedly to select the external input to record from.**
  - Tuner: Built-in tuner
  - AV1: AUDIO IN 1 / VIDEO IN 1 on back panel
  - AV2: INPUT 2 (VIDEO, AUDIO (L/R), S-VIDEO IN) on front panel
  - DV: DV IN on front panel
- 3 Load a recordable disc.**
- 4 Select the recording mode as necessary by pressing REC MODE repeatedly. (HQ, SQ, LQ, EQ)**

HQ: High Quality, SQ: Standard Quality, LQ: Low Quality, EQ: Extended Quality
- 5 Press REC (●) once.**

Recording will start. (The REC indicator lights in the display window.)

  - Recording continues until you press STOP (■) or the disc is full.
  - To record for a fixed length of time, see Instant Timer Recording on page 40.
- 6 Press STOP (■) to stop recording.**

#### **N**ote

If your source is copy-protected using CopyGuard, you will not be able to record it using this Recorder. See Copyright on page 10 for more details.

### Recording from a Digital Camcorder

You can record from a digital camcorder connected to the DV IN port on the front panel of this Recorder. Using the Recorder's remote, you can control both the Camcorder and this Recorder. Before recording, make sure that the audio input for the DV IN port is set up (see page 27).

#### **T**ips

- The source signal must be DVC-SD format.
- Some camcorders cannot be controlled using this Recorder's remote.
- If you connect a second DVD Recorder using a DV cable, you cannot control the second DVD from this one.
- You can't control this unit remotely from a component connected to the DV IN port.
- You can't record date and time information from a DV cassette.

- 1 Make sure your Digital Camcorder is connected to the front panel DV IN port. See page 19.**

- 2 Check that the DV audio input is as you require.**

You can choose between Audio 1 (original audio) and Audio 2 ((over-dubbed audio).

  - DV Input is set from the DV Rec Audio in sub-menu of the Setup menu. See DV Rec Audio on page 27 for more information.

- 3 Press INPUT repeatedly to select the DV input.**

DV appears in the display window and on the TV screen.

- 4 Find the place on the Camcorder tape that you want to the recording to start from.**

For best results, pause playback at the point from which you want to record.

  - Depending on your Camcorder, you can use this Recorder's remote to control the Camcorder using the STOP, PLAY and PAUSE functions.

- 5 Press REC (●) once to start recording.**

- Recording is automatically stopped if the Recorder detects no signal.
- You can pause or stop the recording by pressing PAUSE/STEP (||) or STOP (■). You cannot control the Camcorder from this Remote Control during recording.
- In Video mode, the final frame of the recording may remain displayed on screen for a while after recording stops.
- For timer recording to work properly on this Recorder, the Digital Camcorder must also be switched on and be operating.



## Recording from an External Input Source (Continued)

### What is DV?

Using DV, also known as i.LINK, you can connect a DV-equipped Camcorder to this Recorder using a single DV cable for input and output of audio, video, data and control signals.

The i.LINK interface is also known as IEEE 1394-1995. "i.LINK" and the "i.LINK" logo are trademarks.

- This Recorder is only compatible with DV-format (DVC-SD) camcorders. **Digital Satellite Tuners, PCs, and D-VHS Video Recorders are not compatible.**
- You cannot connect more than one DV camcorder at a time to this Recorder.
- You cannot control this Recorder from external equipment connected via the DV IN port (including two DVD Recorders).
- It may not be possible to always control the connected Camcorder via the DV IN port.
- Digital Camcorders can usually record audio as stereo 16-bit/48kHz, or twin stereo tracks of 12-bit/32kHz. This Recorder can only record one stereo audio track. Set DV Rec Audio to Audio 1 or Audio 2 as required (see page 27).
- Audio input to the DV IN port should be 32 or 48kHz (not 44.1kHz).
- Picture disturbance on the recording may occur if the source component pauses playback or plays an unrecorded section of tape, or if the power fails in the source component, or the DV cable becomes disconnected.
- Although DV Rec Audio is set to Audio 2 and Audio 2 signal is not present, DV Rec Audio will be reset to Audio 1 automatically.

### DV-Related Messages

You may see the following messages appear on your TV screen when using the DV IN port.

#### Not connected to Camcorder

The Camcorder is not connected properly, or the Camcorder is switched off.

#### Too many devices connected

The DV IN port on this Recorder supports connection to just one Camcorder.

#### Check the tape

There is no cassette loaded into the connected equipment.

#### Uncontrollable device

This Recorder cannot control the Camcorder.

#### Updating Information

Camcorder is updating information for DV.

#### Camera mode

Camcorder is set to camera mode.

### Troubleshooting

If you can't get a picture and/or audio through the DV IN port, check the bullet points:

- Make sure the DV cable is properly connected.
- Try switching off the connected equipment then switching back on.
- Try switching the audio input.

#### Note

Depending on the connected Camcorder, you may not be able to control it using the Remote Control supplied with this Recorder.

## Title List and Chapter List Menu


### Using the Title List-Original menu **VR**

The Title List-Original is where you build and edit your Playlist, and where you can delete titles and make other changes to the Original content of the disc. You can also play individual titles directly from the Title List-Original menu.

The Recorder must be in Stop mode in order to edit using the Title List-Original.

#### 1 Press MENU/LIST repeatedly to display the Title List-Original menu.

- Use the ▲ / ▼ buttons to display the previous/ next page if there are more than 6 titles.
- To exit the Title List-Original menu, press RETURN (↵).

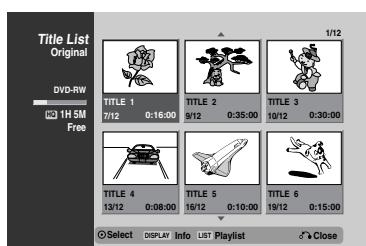

#### 2 To view Title List-Original options, select the title you want then press ENTER.

Title List-Original options appears on the left side of the menu.

#### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Chapter
Delete
Protect
Edit >
Playlist >

**Play:** Starts playback for the selected title.

**Chapter:** Moves to Chapter List-Original menu of the title. (refer to right on this page)

**Delete:** Deletes the title. (page 51)

**Protect:** Protects accidental recording, editing or deleting of the title. (page 54)

**Edit:** Selects Edit options.

- **Title Name:** Edits the title name. (page 52)
- **Delete Parts:** Deletes a part of the Title. (page 51)
- **Undo:** Un-do the last deletion. (page 52)
- **Redo:** Re-do the undo action. (page 52)

**Playlist:** Adds the title to the Playlist. (page 50)

Title Name
Delete Part
Undo
Redo

#### 4 Press RETURN (↵) repeatedly to exit the Title List-Original menu.



Press DISPLAY to show more detailed title information for selected title.

### Using the Chapter List-Original menu **VR**


#### 1 Press MENU/LIST repeatedly to display Title List-Original menu.

#### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view the Chapter List-Original menu then press ENTER.

Title List-Original options appears on the left side of the menu.

#### 3 Use ▲ / ▼ to select 'Chapter' from Title List-Original options then press ENTER.

Chapter List-Original menu appears on the TV screen.

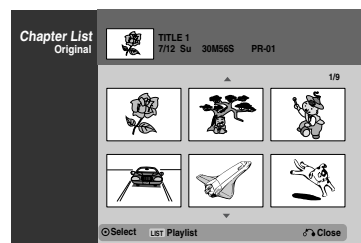

#### 4 To view Chapter List-Original options, select the chapter you want then press ENTER.

Chapter List-Original options appears on the left side of the menu.

#### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Delete
Combine
Playlist >

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List-Original menu of the chapter. (refer to left on this page)

**Delete:** Deletes the chapter. (page 51)

**Combine:** Combines two chapters into one. (page 53)

**Playlist:** Adds the chapter to the Playlist. (page 50)

#### 6 Press RETURN (↵) repeatedly to exit Chapter List-Original menu.




## Title List and Chapter List Menu (Continued)

### Using the Title List-Playlist Menu **VR**

#### 1 Press MENU/LIST repeatedly to display the Title List-Playlist menu.

- Use the ▲ / ▼ buttons to display the previous/ next page if there are more than 6 titles.
- To exit the Title List-Playlist, press RETURN (↵).

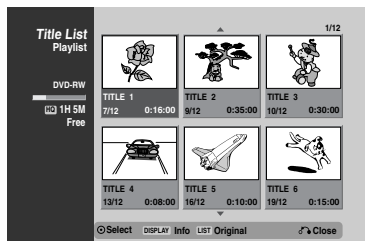

#### 2 To view Title List-Playlist options, select the title you want then press ENTER.

Title List-Playlist options appears on the left side of the menu.

#### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Chapter
Delete
Title Name
Delete Part

**Play:** Starts playback the selected title.

**Chapter:** Moves to Chapter List-Playlist menu of the title. (refer to right on this page)

**Delete:** Deletes the title from the Title List-Playlist menu. (page 51)

**Title Name:** Edits the title name. (page 52)

**Delete Part:** Deletes a part of the Title. (page 51)

#### 4 Press RETURN (↵) repeatedly to exit Title List-Playlist menu.

#### **T**ip

Press DISPLAY to display more detailed title information for selected title.

### Using the Chapter List-Playlist Menu **VR**


#### 1 Press MENU/LIST repeatedly to display the Title List-Playlist menu.

#### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view Chapter List-Playlist menu then press ENTER.

Title List-Playlist options appears on the left side of the menu.

#### 3 Use ▲ / ▼ to select 'Chapter' from Title List-Playlist options then press ENTER.

Chapter List-Playlist menu appears on the TV screen.

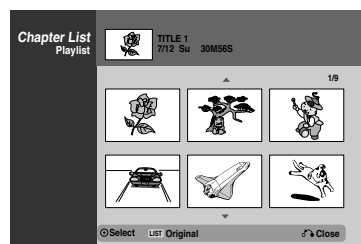

#### 4 To view Chapter List-Playlist options, select the chapter you want then press ENTER.

Chapter List-Playlist options appears on the left side of the menu.

#### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Delete
Combine
Move

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List-Playlist menu of the chapter. (refer to left on this page)

**Delete:** Deletes the chapter from the Chapter List-Playlist menu. (page 51)

**Combine:** Combines two chapters into one. (page 53)

**Move:** Moves a chapter of Chapter List-Playlist menu to a position on the menu. (page 53)

#### 6 Press RETURN (↵) repeatedly to exit Chapter List-Playlist menu.


## Title List and Chapter List Menu (Continued)

### Using the Title List menu Video

From the Title List display you can play, name, and delete titles.

After a Video mode disc is finalized, the Title List screen changes its appearance and all you can do is select titles to play.

#### 1 Press MENU/LIST to display the Title List.

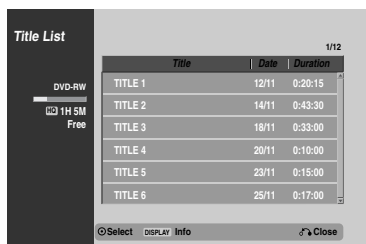

#### 2 Use ▲ / ▼ to choose a title then press ENTER. Title List options appears on the left side of the Title List display.

#### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title Name
Delete

**Play:** Starts playback of the selected title.

**Title Name:** Edits the title name. (page 52)

**Delete:** Deletes the title from the Title List.

#### 4 Press RETURN (↵) repeatedly to exit Title List.



**Tip**  
Press DISPLAY to display more detailed title information for selected title.

### Deleting a Title Video

Before a disc is finalized, you can delete titles recorded on the disc.



#### Caution

- If you delete a title from a DVD-R disc, the title will disappear from the Title List, but the available recording time will not increase.
- When deleting a title from a DVD-RW disc, the remaining time available for recording will only increase if it is the last title on the disc.

#### 1 Press MENU/LIST to display Title List

#### 2 Use ▲ ▼ ◀ ▶ to choose a title you want to delete then press ENTER.

Title List options appears on the left side of the Title List menu.

#### 3 Use ▲ / ▼ to select 'Delete' then press ENTER to confirm.

After pressing ENTER, the new, updated title list is displayed.


Play
Title Name
Delete

#### 4 Repeat steps 2-3 to delete additional titles from the Title List.

#### 5 Press RETURN (↵) repeatedly to remove the Title List display.

### If the disc has already been finalized

You should see a screen like the one below.

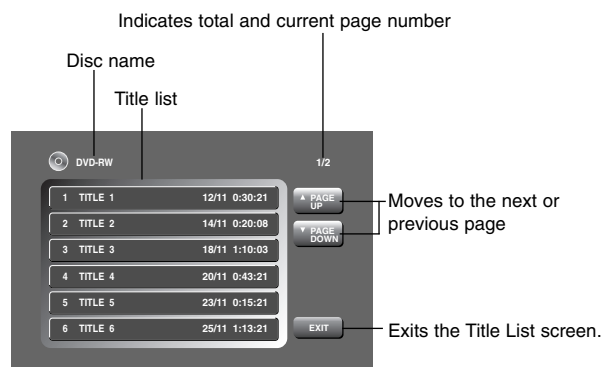

- Also you can exit the Title List display using TITLE or MENU/LIST.


## Title List and Chapter List Menu (Continued)

### Using the Title List menu **+RW**

The Title List is where you can see all recorded titles, and where you can delete titles and make other changes to the Original content of the disc. You can also play titles directly from the Title List menu. The Recorder must be in Stop mode in order to edit using the Title List menu.

#### 1 Press MENU/LIST to display the Title List menu.

- Use the ▲ / ▼ buttons to display the previous/ next page if there are more than 6 titles.
- To exit the Title List menu, press RETURN (↵).

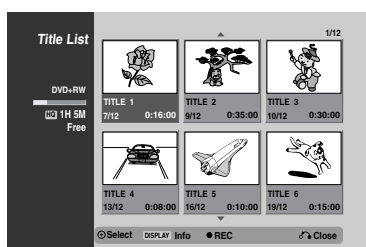

#### 2 To view Title List options, select the title you want then press ENTER.

Title List options appear on the left side of the menu.

#### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Full Play
Chapter
Delete
Protect
Edit >

Title Name
Divide
Hide

**Play:** Starts playback of the selected title except the hidden chapters.

**Full Play:** Starts playback of the selected title including the hidden chapters.

**Chapter:** Moves to Chapter List menu of the title. (refer to right on this page)

**Delete:** Deletes the title. (page 51)

**Protect:** Protects against accidental recording, editing, or deleting of the title. (page 54)

**Edit:** Selects Edit options.

- **Title Name:** Edits the title name. (page 52)
- **Divide:** Divides one title into two titles. (page 55)
- **Hide (Show):** Hides (or Shows) the all chapters within the title. (page 54)

#### 4 Press RETURN (↵) repeatedly to exit Title List menu.



**Tip**  
Press DISPLAY to display more detailed title information for selected title.



**Caution**  
If you press REC (●) after the Title List menu appears, the selected title is erased then overwrite recording starts. (See page 56 for more details.)

### Using the Chapter List menu **+RW**


#### 1 Press MENU/LIST to display Title List menu.

#### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view Chapter List menu then press ENTER.

Title List options appear on the left side of the menu.

#### 3 Use ▲ / ▼ to select 'Chapter' from Title List options then press ENTER.

Chapter List menu appears on the TV screen.

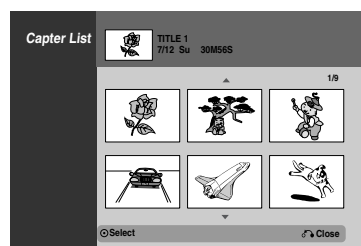

#### 4 To view Chapter List options, select the chapter you want then press ENTER.

Chapter List options appear on the left side of the menu.

#### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Combine
Hide

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List menu of the chapter. (refer to left on this page)

**Combine:** Combines two chapters into one. (page 53)

**Hide (Show):** Hides (or Shows) the selected chapter. (page 54)

#### 6 Press RETURN (↵) repeatedly to exit Chapter List menu.


## Title List and Chapter List Menu (Continued)

### Using the Title List menu **+R**

The Title List is where you can see all recorded titles, and where you can delete titles and make other changes to the Original content of the disc. You can also play titles directly from the Title List menu. The Recorder must be in Stop mode in order to edit using the Title List menu.

#### 1 Press MENU/LIST to display the Title List menu.

- Use the ▲ / ▼ buttons to display the previous/ next page if there are more than 6 titles.
- To exit the Title List menu, press RETURN (↵).

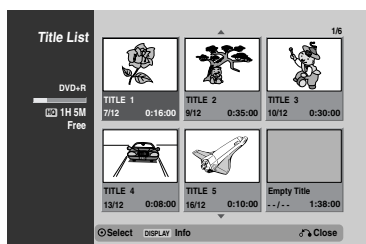

#### 2 To view Title List options, select the title you want then press ENTER.

Title List options appear on the left side of the Title List menu.

#### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

<b>Play</b>	
<b>Full Play</b>	
<b>Chapter</b>	
<b>Delete</b>	
<b>Protect</b>	
<b>Edit</b> >	
<b>Title Name</b>	
<b>Divide</b>	
<b>Hide</b>	

**Play:** Starts playback of the selected title except the hidden chapters.

**Full Play:** Starts playback of the selected title including the hidden chapters.

**Chapter:** Moves to Chapter List menu of the title. (refer to right on this page)

**Delete:** Deletes the title. (page 51)

**Protect:** Protects against accidental recording, editing, or deleting of the title. (page 54)

**Edit:** Selects Edit options.

- **Title Name:** Edits the title name. (page 52)
- **Hide (Show):** Hides (or Shows) the all chapters within the title.

#### 4 Press RETURN (↵) repeatedly to exit Title List menu.



Press DISPLAY to display more detailed title information for selected title.

### Using the Chapter List menu **+R**


#### 1 Press MENU/LIST to display Title List menu.

#### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view the Chapter List menu then press ENTER.

Title List options appear on the left side of the menu.

#### 3 Use ▲ / ▼ to select 'Chapter' from the Title List options then press ENTER.

Chapter List menu appears on the TV screen.

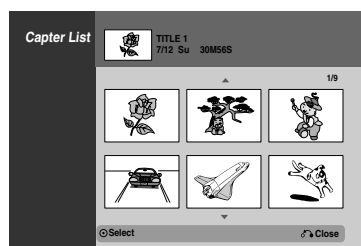

#### 4 To view Chapter List options, select the chapter you want then press ENTER.

Chapter List options appear on the left side of the menu.

#### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Combine
Hide

**Play:** Starts playback of the selected chapter.

**Title:** Moves to the Title List menu of the chapter. (refer to left on this page)

**Combine:** Combines two chapters into one. (page 53)

**Hide (Show):** Hides (or Shows) the selected chapter. (page 54)

#### 6 Press RETURN (↵) repeatedly to exit Chapter List menu.

## Title and Chapter Editing

Edits you make to the Original content change the actual content of the disc. For example, if you delete a title or chapter from the Original content (Title or Chapter), that title or chapter is deleted from the disc, freeing up extra recording time.

When you edit the Playlist, on the other hand, you are not changing the content of the disc. For example, when you delete a title from the Playlist, you are just telling the Recorder not to play that title; nothing is actually deleted from the disc.

### Titles, Chapters, and Parts

Titles in the disc's original content contain one or more chapters. When you insert a title into the Playlist, all the chapters within that title also appear. In other words, chapters in the Playlist behave exactly as chapters on a DVD-Video disc do. Parts are sections of Original or Playlist titles. From the Original and Playlist menu, you can add or delete parts. Adding a chapter or title to the Playlist creates a new title made up of a section (ie., chapter) of an Original title. Deleting a part removes part of a title from the Original or Playlist menu.

#### **Caution**

- When editing using the Delete, Add, or Move functions, the start and end frames may not be exactly as set in the starting and ending points display.
- During Playlist playback, you may notice a momentary pause between edits. This is not a malfunction.

### Adding Chapter Markers

    Chapter

You can put a chapter marker anywhere in a Playlist or Original title during recording or playback.

Once the chapter is marked, you can use the Chapter Search feature, as well as delete, combine and move chapters in the Chapter List-Original or Chapter List-Playlist menu.

You can insert up to 999 chapter markers in both the Original and Playlist contents.

#### **Note**

Chapter markers are inserted at regular intervals automatically. You can change this interval from the Initial Setup menu (see Auto Chapter on page 27).

#### **1** Play the title (Original or Playlist).

#### **2** At the point you want to start a new chapter, press **CHP ADD**.

A chapter marker icon appears on the TV screen.

- You can also put chapter markers in while recording.

### Changing Title Thumbnails

    Thumbnail

Each title displayed in the Title List menu is represented by a thumbnail picture taken from the start of that title or chapter.

If you prefer, select a different still picture from within a title.

#### **1** Play the title (Original or Playlist).

#### **2** Press **THUMBNAIL** to make the currently displayed picture the one that appears in the Original or Playlist menu.

The still picture that you choose appears in both the Original or Playlist menu.

#### **Tip**

You can also change the thumbnail picture of the title on the Chapter List-Original or Chapter List-Playlist menu. Select a chapter on the Chapter List-Original or Chapter List-Playlist menu, then press **THUMBNAIL**. The thumbnail picture of the title that includes the chapter is changed.

## Title and Chapter Editing (Continued)

### Making a New Playlist **VR**

Use this function to add an Original title or chapter to the Playlist. When you do this, the whole title is put into the Playlist (you can delete bits you don't need later — see Deleting an Original or Playlist title/chapter on page 52).

The title appears in the Playlist complete with the chapter markers that appeared on the Original. However, if you add more chapter markers to the Original later, these are not automatically copied over into the Playlist title.


You can add up to 999 chapters to one disc. If you only want to add a chapter of a title, use the Adding a title/chapter to the Playlist on this page.

#### 1 Press MENU/LIST repeatedly to display Title List-Original menu.


If you want to display the Chapter List-Original menu, refer to “Using the Chapter List-Original menu” on page 44.

#### 2 Choose a title or chapter on the Original menu to put into the Playlist, then press ENTER.

Original (Title or Chapter) options appear on the left side of the Original menu.

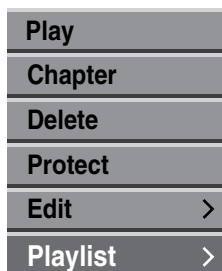


Title List-Original

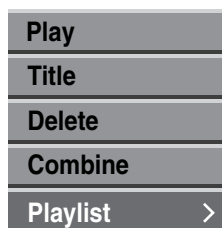

Chapter List-Original

#### 3 Use ▲ / ▼ to select 'Playlist' from Original options then press ENTER.

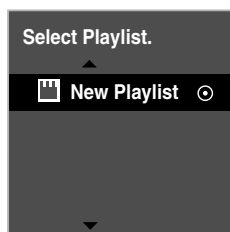

#### 4 Select 'New Playlist' then press ENTER.

The new title appears in the updated Playlist. All chapters of the title are added to the Playlist.

### Adding Additional Title/Chapters to the Playlist **VR**


You can add an Original title or chapter to a Playlist title even if it is already registered.

#### 1 Press MENU/LIST repeatedly to display Title List-Original menu.


If you want to show the Chapter List-Original menu, refer to “Using the Chapter List-Original” on page 44.

#### 2 Choose an Original title or chapter to put into the Playlist, then press ENTER.

Original menu options appear on the left side of the screen.

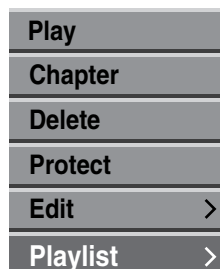


Title List-Original

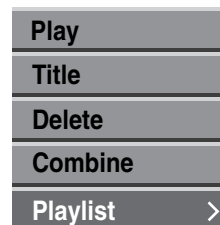

Chapter List-Original

#### 3 Use ▲ / ▼ to select 'Playlist' from Original menu options then press ENTER.

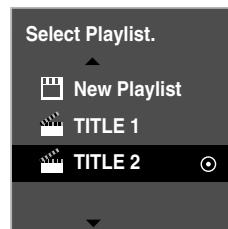

#### 4 Choose a Title List-Playlist that is already registered to insert a title or chapter, then press ENTER.

The title or chapter appears in the updated Playlist menu.

#### 5 Repeat steps 1-4 to add additional title or chapter on the Playlist.

#### 6 Press RETURN (↵) to exit, or MENU/LIST to go back to the Title List-Original menu.

## Title and Chapter Editing (Continued)

### Deleting a Title/Chapter

VR

+RW

+R

If you erase a title or chapter from the Playlist menu on DVD-RW discs formatted in VR mode, you only remove it from the Playlist; the title/chapter remains in the Original menu.

If you choose to delete a title or chapter from Title List or Chapter List menu, the title or chapter is actually deleted from the disc and the remaining time available for recording increases. Titles/chapters deleted from the Original are also removed from the Playlist.

#### Note


It may not be possible to delete chapters that are less than 5 seconds long.

- 1 On the Title List or Chapter List menu, use **▲ ▼ ◀ ▶** to choose a chapter or title you want to delete then press **ENTER**.

Options appears on the left side of the screen.

- 2 Select **'Delete'** from the options on the menu.

e.g., If you select "Delete" on the Title List-Original menu.

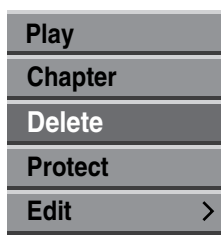

- 3 Press **ENTER** to confirm.

The confirm message for deleting will appear.

- 4 Use **◀ / ▶** to select **'Yes'** then press **ENTER**.

The selected chapter or title is deleted.  
After pressing **ENTER**, the new, updated menu is displayed.

- 5 Repeat steps 1 - 4 to continue to delete from the menu.

- 6 Press **RETURN** (↵) repeatedly to exit the menu.

#### Note

- When DVD+RW recording, the deleted title's name is changed to 'Deleted Title'.
- If the deleted titles are more than two, the titles are combined into one.

### Deleting a Part **VR**

You can delete a part which you do not want in the title.

- 1 Press **MENU/LIST** repeatedly to display Title List-Original or Title List-Playlist menu.

- 2 Use **▲ ▼ ◀ ▶** to choose a title you want to delete then press **ENTER**.  
The options appears on the left side of the menu.

- 3 Select **'Delete Part'** from the options on the menu.  
e.g., If you select "Delete Part" on the Title List-Original menu.



- 4 Press **ENTER**.

Title Edit (Delete Part) menu appears on the TV screen.

'Start' icon is highlighted.



- 5 Starts playback and use pause step, search and slow-motion to find the starting point.

- 6 Press **ENTER** at the starting point of the section you want to delete.

'End' icon is highlighted.

The part is indicated on the Progress Bar.

- 7 Use pause step, search, skip and slow-motion to find the ending point.

- 8 Press **ENTER** at the ending point of the section you want to delete.

You can cancel the selected point, use **▲ / ▼** to select **'Cancel'** icon then press **ENTER**.

- 9 After you finish editing, select the **'Done'** icon then press **ENTER**.

The confirm message for deleting will appear.

- 10 Use **◀ / ▶** to select **'Yes'** then press **ENTER**.  
The selected part is deleted from the title and Title List-Original or Title List-Playlist menu appears.



## Title and Chapter Editing (Continued)

### Undoing/Redoing the Last Deletion VR

If you make a mistake while deleting, you can undo it. There is one level of undo (in other words, you can undo the last one deletion you made).

- 1** Select 'Undo' from the Title List-Original or Chapter List-Original menu then press ENTER. It doesn't matter whether you are currently in the Title List-Original or Chapter List-Original menu; the last deletion is undone.

e.g., If you select "Undo" on the Title List-Original menu.



#### **N**otes

- You can't undo a recording.
- You can't undo anything after ejecting the disc from the Recorder or switching the Recorder into standby mode.
- You can still undo a deletion even after exiting the menu display.

#### **T**ip

You can redo the last undo action using the 'Redo' option. Select 'Redo' from the Title List-Original or Chapter List-Original menu options then press ENTER.

### Naming a Title VR Video +RW +R

You can name titles independently. Names can be up to 32 characters long.


- 1** On the Title List menu, use ▲▼◀▶ to choose the title you want to name then press ENTER. Options appears on the left side of the menu.

- 2** Use ▲/▼ to select the 'Title Name' option then press ENTER. Keyboard menu appears.

e.g., If you select "Title Name" on the Title List-Original menu.



- 3** Enter a name for the title. Use ▲▼◀▶ to select a character then press ENTER to confirm your selection. Refer to step 5 as shown on page 28 (Disc Label).

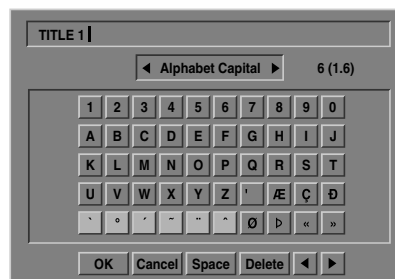

- 4** Choose OK then press ENTER to save the name and return to the previous menu display.

- 5** Press RETURN (↵) repeatedly to exit the menu.

#### **N**otes

- Names can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited character set.
- When recording on DVD-R, DVD+R or DVD+RW discs, the entered name is displayed on the DVD player only after finalization.



## Title and Chapter Editing (Continued)

### Combining Two Chapters Into One

**VR** **+RW** **+R**

Use this function to combine two adjacent Playlist or Original chapters into one.

#### Note

This function is not available if there is only one chapter within the title.


- 1 On the Chapter List menu, select the second chapter of the two chapters you want to combine then press **ENTER**.

Chapter List options appear on the left side of the menu.

- 2 Use **▲ / ▼** to select 'Combine'.

The combine indicator appears between the two chapters you want to combine.

e.g., If you select "Combine" on the Chapter List-Original menu.

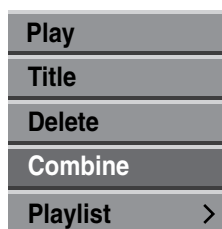

- 3 Press **ENTER** to confirm.

After pressing **ENTER**, the updated menu is displayed.

### Moving a Playlist Chapter **VR**


Use this function to re-arrange the playing order of the Playlist chapters on the Title List-Playlist menu.

- 1 Press **MENU/LIST** repeatedly to display Title List-Playlist menu.

To display the Chapter List-Playlist menu, refer to "Using the Chapter List-Playlist" on page 45.

#### Note

This function is not available if there is only one chapter.

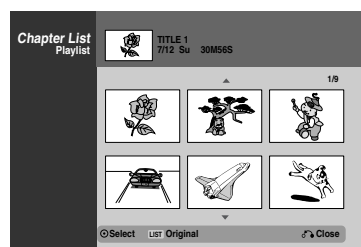

- 2 Select a chapter from the Chapter List-Playlist menu.

- 3 Press **ENTER**.

Chapter List-Playlist options appear on the left side of the menu.

- 4 Use **▲ / ▼** to select 'Move' from Playlist options then press **ENTER**.



- 5 Use **▲ ▼ ◀ ▶** to choose the place you want to move the chapter to then press **ENTER**.

After pressing **ENTER**, updated menu is displayed.

## Title and Chapter Editing (Continued)

### Protect a Title **VR** **+RW** **+R**

Use this function to protect against accidental recording, editing or deleting of the title.

**1** Press MENU/LIST to display the Title List menu.

**2** Use ▲▼◀▶ to choose a title you want to protect then press ENTER.

Options appear on the left side of the screen.

**3** Select 'Protect' from the options.

Play
Full Play
Chapter
Delete
Protect
Edit >

**4** Press ENTER to confirm.

The lock mark will appear on the title's thumbnail.



If you select a title that has already been protected on the Title List menu, you can 'unprotect' it by choosing "Protect" from the Title List menu options. After doing that, you can edit and delete the title.

### Hide a Title/Chapter **+RW** **+R**

Use this function to hide a title/chapter on the Title List or Chapter List menu.

**1** On the Title List or Chapter List menu, use ▲▼◀▶ to choose a title or chapter you want to hide then press ENTER.

Options appear on the left side of the screen.

**2** Select "Hide" from the options.

e.g., If you select "Hide" on the Title List menu.

Play	
Full Play	
Chapter	
Delete	Title Name
Protect	Divide
Edit	Hide

**3** Press ENTER to confirm.

The title's thumbnail will dim.



If you select a title that is already dim on the Title List menu, you can 'show' it by choosing "Show" from the Title List menu options. After doing that, you are able to see the title.

## Title and Chapter Editing (Continued)

### Dividing One Title Into Two **+RW**


Use this command to split a title up into two new titles.

**1** On the Title List menu, select a title you want to divide then press ENTER.  
The menu options appears on the left side of the screen.

**2** Select 'Divide' from the Title List menu options.



**3** Press ENTER after the 'Divide' option is highlighted.  
Title Edit-Divide menu appears and goes into STOP mode.

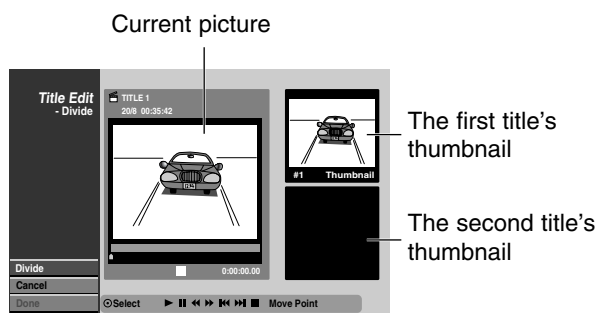

**4** Use pause step, search, skip and slow-motion to find the point you want to divide the title.

**5** When the 'Divide' option is highlighted, press ENTER at that point.

You can remove the dividing point and exit the Title Edit-Divide menu, use ▲ / ▼ to select 'Cancel' option then press ENTER. The division point is removed.

**6** Choose 'Done' option then press ENTER to fix the dividing point.

The title is divided into two new titles. It take up to 4 minutes to divide.

## Addition Information

### Clean-up Recordings **Video** **VR** **+RW**

You can simply clean-up (erase) all the contents from a disc then start recording from the first section of the disc. The disc format is not changed.

- 1 Turn on the Recorder and load a recordable disc.**
- 2 Press and hold REC (●) button for more than 3 seconds.**  
The message below will appear on the TV screen.




- 3 Use ◀ / ▶ to select "Yes" then press ENTER.**  
Recording will start. (The REC indicator lights in the display window.)

### Overwriting Recording **+RW**

To overwrite a new video recording on a previously recorded title, follow these steps. This feature is not available for DVD+Rs, that always record at the end of the Disc.

- 1 Select input source you want to record (TV channel, AV1-2, DV).**
- 2 Press MENU/LIST to display the Title List menu.**

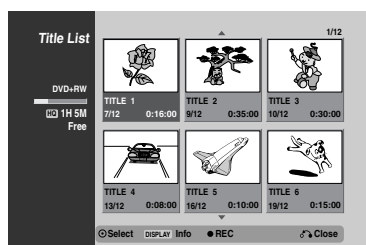

- 3 Use ▲ ▼ ◀ ▶ to choose a title you want to overwrite.**
- 4 Press REC (●) to start overwrite recording.**  
Overwrite recording starts from the start point of the title.
- 5 Press STOP (■) to stop the overwrite recording.**  
The new title is created and updated menu is displayed.

#### **N**otes

- This function is not available for a protected title.
- If the overwrite is longer than the recording length of the current title, the next title is overwritten. But if next title is protected, the overwriting stops at the starting point of the title.
- If the selected title's recording length is less than 10 seconds, the next title is overwritten. But if the next title is protected, overwriting stops.

### Viewing Title List menu displayed on other DVD Recorders or Players


**+RW** **+R**

You can view the Title List menu displayed on the another DVD player that is capable of playing DVD+RW or DVD+R discs.

- 1 Insert DVD+R or DVD+RW disc recorded already.**
- 2 Press TITLE or press and hold MENU/LIST button for three seconds in Stop mode.**  
Title List menu will appear as shown below.

#### **T**ip

You can remove the Title List menu by pressing STOP (■).

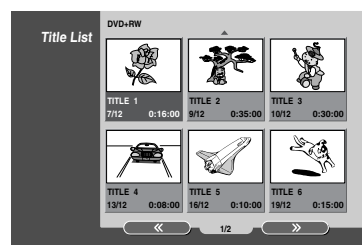

- 3 To play back a title, select the title you want then press ENTER or ▶ (PLAY).**

### Playing Your Recordings on Other DVD Players (Finalizing a Disc)

Most regular DVD players can play finalized discs recorded in Video mode, finalized DVD+R or DVD+RWs. A small number of players can also play DVD-RW discs recorded in VR mode, finalized or not. Check the manual that came with the other player to check what formats of discs it will play.

Finalizing 'saves' the recordings and editings in place so that the disc can be played on a regular DVD player or computer equipped with a suitable DVD-ROM drive. Finalizing a Video mode disc creates a menu screen for navigating the disc. The menu can be accessed by pressing MENU/LIST or TITLE.

To finalize a disc, refer to "Finalize" on page 28.

#### **N**otes

- Unfinalized DVD+RW is playable on regular DVD players.
- The edited contents of a DVD+RW disc is compatible on regular DVD players only after finalization.
- Any edited contents of the DVD+R disc are not compatible on regular DVD players. (Hide, chapter combine, added chapter mark, etc.)

## Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 23).

Code	Language	Code	Language	Code	Language	Code	Language
6566	Abkhazian	7074	Fiji	7678	Lingala	8373	Singhalese
6565	Afar	7073	Finnish	7684	Lithuanian	8375	Slovak
6570	Afrikaans	7082	French	7775	Macedonian	8376	Slovenian
8381	Albanian	7089	Frisian	7771	Malagasy	8379	Somali
6577	Amharic	7176	Galician	7783	Malay	6983	Spanish
6582	Arabic	7565	Georgian	7776	Malayalam	8385	Sudanese
7289	Armenian	6869	German	7784	Maltese	8387	Swahili
6583	Assamese	6976	Greek	7773	Maori	8386	Swedish
6588	Aymara	7576	Greenlandic	7782	Marathi	8476	Tagalog
6590	Azerbaijani	7178	Guarani	7779	Moldavian	8471	Tajik
6665	Bashkir	7185	Gujarati	7778	Mongolian	8465	Tamil
6985	Basque	7265	Hausa	7865	Nauru	8484	Tatar
6678	Bengali; Bangla	7387	Hebrew	7869	Nepali	8469	Telugu
6890	Bhutani	7273	Hindi	7879	Norwegian	8472	Thai
6672	Bihari	7285	Hungarian	7982	Oriya	6679	Tibetan
6682	Breton	7383	Icelandic	8065	Panjabi	8473	Tigrinya
6671	Bulgarian	7378	Indonesian	8083	Pashto, Pushto	8479	Tonga
7789	Burmese	7365	Interlingua	7065	Persian	8482	Turkish
6669	Byelorussian	7165	Irish	8076	Polish	8475	Turkmen
7577	Cambodian	7384	Italian	8084	Portuguese	8487	Twi
6765	Catalan	7465	Japanese	8185	Quechua	8575	Ukrainian
9072	Chinese	7487	Javanese	8277	Rhaeto-Romance	8582	Urdu
6779	Corsican	7578	Kannada	8279	Romanian	8590	Uzbek
7282	Croatian	7583	Kashmiri	8285	Russian	8673	Vietnamese
6783	Czech	7575	Kazakh	8377	Samoan	8679	Volapük
6865	Danish	7589	Kirghiz	8365	Sanskrit	6789	Welsh
7876	Dutch	7579	Korean	7168	Scots Gaelic	8779	Wolof
6978	English	7585	Kurdish	8382	Serbian	8872	Xhosa
6979	Esperanto	7679	Laothian	8372	Serbo-Croatian	7473	Yiddish
6984	Estonian	7665	Latin	8378	Shona	8979	Yoruba
7079	Faeroese	7686	Latvian, Lettish	8368	Sindhi	9085	Zulu

## Country Code List


Enter the appropriate code number for the initial setting “Country Code” (See page 26).

Code	Country	Code	Country	Code	Country	Code	Country
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SC	Seychelles
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SD	Sudan
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SE	Sweden
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SG	Singapore
AI	Anguilla	FJ	Fiji	LS	Lesotho	SH	Saint Helena
AL	Albania	FK	Falkland Islands	LT	Lithuania	SI	Slovenia
AM	Armenia	FM	Micronesia	LU	Luxembourg	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SK	Slovak Republic
AO	Angola	FR	France	LY	Libya	SL	Sierra Leone
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SM	San Marino
AR	Argentina	GA	Gabon	MC	Monaco	SN	Senegal
AS	American Samoa	GB	Great Britain	MD	Moldavia	SO	Somalia
AT	Austria	GD	Grenada	MG	Madagascar	SR	Suriname
AU	Australia	GE	Georgia	MH	Marshall Islands	ST	Saint Tome and Principe
AW	Aruba	GF	French Guyana	MK	Macedonia	SU	Former USSR
AZ	Azerbaijan	GH	Ghana	ML	Mali	SV	El Salvador
BA	Bosnia-Herzegovina	GI	Gibraltar	MM	Myanmar	SY	Syria
BB	Barbados	GL	Greenland	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GM	Gambia	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GP	Guadeloupe (French)	MQ	Martinique (French)	TF	French Southern Territories
BG	Bulgaria	GQ	Equatorial Guinea	MR	Mauritania	TG	Togo
BH	Bahrain	GR	Greece	MS	Montserrat	TH	Thailand
BI	Burundi	GS	S. Georgia & S. Sandwich Isls.	MT	Malta	TJ	Tadjikistan
BJ	Benin	GT	Guatemala	MU	Mauritius	TK	Tokelau
BM	Bermuda	GU	Guam (USA)	MV	Maldives	TM	Turkmenistan
BN	Brunei Darussalam	GW	Guinea Bissau	MW	Malawi	TN	Tunisia
BO	Bolivia	GY	Guyana	MX	Mexico	TO	Tonga
BR	Brazil	HK	Hong Kong	MY	Malaysia	TP	East Timor
BS	Bahamas	HM	Heard and McDonald Islands	MZ	Mozambique	TR	Turkey
BT	Bhutan	HN	Honduras	AN	Namibia	TT	Trinidad and Tobago
BV	Bouvet Island	HR	Croatia	NC	New Caledonia (French)	TV	Tuvalu
BW	Botswana	HT	Haiti	NE	Niger	TW	Taiwan
BY	Belarus	HU	Hungary	NF	Norfolk Island	TZ	Tanzania
BZ	Belize	ID	Indonesia	NG	Nigeria	UA	Ukraine
CA	Canada	IE	Ireland	NI	Nicaragua	UG	Uganda
CC	Cocos (Keeling) Islands	IL	Israel	NL	Netherlands	UK	United Kingdom
CF	Central African Republic	IN	India	NO	Norway	UM	USA Minor Outlying Islands
CG	Congo	IO	British Indian Ocean Territory	NP	Nepal	US	United States
CH	Switzerland	IQ	Iraq	NR	Nauru	UY	Uruguay
CI	Ivory Coast	IR	Iran	NU	Niue	UZ	Uzbekistan
CK	Cook Islands	IS	Iceland	NZ	New Zealand	VA	Vatican City State
CL	Chile	IT	Italy	OM	Oman	VC	Saint Vincent & Grenadines
CM	Cameroon	JM	Jamaica	PA	Panama	VE	Venezuela
CN	China	JO	Jordan	PE	Peru	VG	Virgin Islands (British)
CO	Colombia	KE	Kenya	PF	Polynesia (French)	VI	Virgin Islands (USA)
CR	Costa Rica	KG	Kyrgyzstan	PG	Papua New Guinea	VN	Vietnam
CS	Former Czechoslovakia	KH	Cambodia	PH	Philippines	VU	Vanuatu
CU	Cuba	KI	Kiribati	PK	Pakistan	WF	Wallis and Futuna Islands
CV	Cape Verde	KM	Comoros	PL	Poland	WS	Samoa
CX	Christmas Island	KN	Saint Kitts & Nevis Anguilla	PM	Saint Pierre and Miquelon	YE	Yemen
CY	Cyprus	KP	North Korea	PN	Pitcairn Island	YT	Mayotte
CZ	Czech Republic	KR	South Korea	PR	Puerto Rico	YU	Yugoslavia
DE	Germany	KW	Kuwait	PT	Portugal	ZA	South Africa
DJ	Djibouti	KY	Cayman Islands	PW	Palau	ZM	Zambia
DK	Denmark	KZ	Kazakhstan	PY	Paraguay	ZR	Zaire
DM	Dominica	LA	Laos	QA	Qatar	ZW	Zimbabwe
DO	Dominican Republic	LB	Lebanon	RE	Reunion (French)		
DZ	Algeria			RO	Romania		
EC	Ecuador			RU	Russian Federation		
EE	Estonia			RW	Rwanda		
EG	Egypt			SA	Saudi Arabia		
EH	Western Sahara			SB	Solomon Islands		

## Controlling Your TV with the Supplied Remote

You can control the sound level, input source, and power switch of your LG TV with the supplied remote.

You can control your TV using the buttons below.

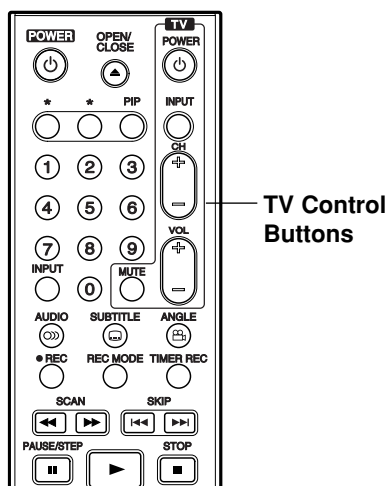

By pressing	You can
POWER	Turn the TV on or off.
INPUT	Switch the TV's input source between the TV and other input sources.
CH +/-	Scan up or down through memorized channels.
VOL +/-	Adjust the sound level of the TV.
MUTE	Temporarily turn TV sound OFF, press again to restore.

## Controlling other TVs with the remote

You can control the sound level, input source, and power switch of non-LG TVs as well. If your TV is listed in the table below, set the appropriate manufacturer code.

1. While holding down TV POWER button, press the number buttons to select the manufacturer code for your TV (see the table below).
2. Release TV POWER button.

## Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code Number	Manufacturer	Code Number
ADMIRAL	16,33,37,44,45	MONTGOMERY	01,06,08,09
AIWA	70	WARD	23,24,32,33,34
AKAI	01	NEC	01,08
AMARK	09	NOBLEX	07
AOC	01	PACKARD BELL	43
BELL & HOWELL	33	PANASONIC	07,11,13,25,35,36
BROKSONIC	18,19	PHILCO	01,06,07,08,09,15,38,43,58
CANDLE	51	PHILIPS	06,07,43,61,62,65
CCE	07	PIONEER	30
CENTURION	08	PORTLAND	09
CINERAL	43	PROSCAN	03,37,44
CITIZEN	49,50,51,52,53,54,55	QUASAR	11,13
CORONADO	09	RADIO SHACK	16,17,23
CROWN	09	RCA	01,03,37,44,69
CURTIS MATHES	01,03,08,33,35,37,44	REALISTIC	16,17,23
DAEWOO	16,38,39,40,41,42,43	SAMPO	08
DAYTRON	01,08	SAMSUNG	01,08,09,25,68
EMERSON	01,09,16,17,18,19	SANYO	28,29
FISHER	28,29	SCOTT	01,08
FUNAI	46,47	SEARS	09,25,26,27,28,29
GENERAL ELECTRIC	03,10,11,13,37,44	SEMP	64
GRADIENTE	01,56,57,63,67	SHARP	09,22,23,24,60,66
HITACHI	09,14,15,43	SIGNATURE 2000	01,06,08,09,10,23,24,33,34
JC PENNEY	01,08,10,27,35	SONY	12,62
JVC	20,21,63,67	SOUNDESIGN	51
KIOTE	43	SYLVANIA	01,04,05,06,07,08,35,51
KMC	09	SYMPHONIC	46,47
KTV	01,08,09,31	TATUNG	11
LG (GOLDSTAR)	01,07,08,09,35,39,40	TEKNIKA	07,09,16,33,51
LODGENET	33	TELERENT	09,33
LOGIK	33	THOMSON	69
LXI	09,24,25,26,27,28,29	YORX	08
MAGNAVOX	01,02,04,05,06,07,08,09,20,34,35,43,51,61,62,65	TOSHIBA	01,25,26,27,64
MAJESTIC	33	WARDS	01,06,08,09,10,33,34
MARANTZ	01,32	XR1000	48
MEMOREX	33	ZENITH	01,02,33,59
MGA/MITSUBISHI	01,08,32,34		

## Notes

- Depending on your TV, some or all buttons may not function on the TV, even after entering the correct manufacturer code.
- If you enter a new code number, the code number previously entered will be erased.
- After you replace the batteries in the remote, the code number you have set may be reset to the default setting. Re-enter the appropriate code number again.

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Solution
No power.	<ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the power cord into the wall outlet securely.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive DVD Recorder signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the DVD Recorder appears on the TV screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>The equipment connected with the audio cable(s) is not set to receive DVD Recorder signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the correct input mode on the Audio Receiver so you can listen to the sound from the DVD Recorder.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio connecting cord is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Replace it with new one.</li> </ul>
The playback picture is poor.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
The DVD Recorder does not start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check that the disc indicator in the display window is lit.)</li> </ul>
	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system, and regional code.)</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>
The picture from the external input is distorted	<ul style="list-style-type: none"> <li>The video signal from the external component is copy-protected.</li> </ul>	<ul style="list-style-type: none"> <li>You cannot connect via this Recorder. Connect the component directly to your TV.</li> </ul>
Some channels are skipped over when using ▲ / ▼.	<ul style="list-style-type: none"> <li>Those channels are not stored in the Recorder.</li> </ul>	<ul style="list-style-type: none"> <li>Restore channels. See "To Add or Erase Channels from Memory" on page 21.</li> </ul>
The picture or sound of broadcasting channel is weak or missing.	<ul style="list-style-type: none"> <li>Antenna or cables are loose.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten connections or replace cable.</li> </ul>
Camcorder image is not shown.	<ul style="list-style-type: none"> <li>Camcorder is off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn camcorder on and operate properly.</li> </ul>
Camcorder image via A/V input or DV IN to DVD Recorder is not shown on TV screen.	<ul style="list-style-type: none"> <li>DVD Recorder INPUT SELECT is incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>Use INPUT to select input channel (AV1, AV2, DV, etc.)</li> </ul>



## Troubleshooting (Continued)

Symptom	Cause	Solution
Can't play a disc recorded using this Recorder on another player.	• The disc was recorded in Video mode.	• Finalize the disc. (page 28)
	• Some players will not play even a finalized disc recorded in Video mode.	• No solution.
	• The disc was recorded in VR mode,	• The other player must be RW compatible in order to play it.
	• Discs recorded with copy-once material cannot be played on other players.	• No solution.
Cannot record or did not record successfully.	• The remaining blank space on the disc is insufficient.	• Use another disc.
	• The source you are trying to record is copy protected.	• You cannot record the source.
	• When setting the recording channel, the channel is tuned on the TV's own tuner.	• Select the channel on the Recorder's built-in TV tuner.
	• When recording to a Video mode disc, programs that are copy-once protected cannot be recorded.	• Use a VR mode formatted disc for copy-once material.
Timer recording is not possible.	• Clock in DVD Recorder is not set to correct time.	• Set clock to correct time. See "Auto Clock Set" or "Manual Clock Set" on pages 21- 22.
	• Timer has been programmed incorrectly.	• Reprogram Timer. See "Timer Recording" on page 41.
	• Timer record indicator light does not appear after programming timer.	• Reprogram Timer.
Stereo Audio Record and/or Playback is not present.	• TV is not Stereo-compatible.	• No solution.
	• Broadcast program is not in stereo format.	• No solution.
	• DVD Recorder A/V Out jacks are not connected to TV A/V In jacks.	• Make A/V connections. Stereo is available only via A/V output from DVD Recorder.
	• DVD Recorder Audio/Video Out is not selected for viewing at the TV.	• Select AUX or A/V source as TV input.
	• DVD Recorder's TV audio channel is set to mono.	• Set TV audio channel mode to Stereo. See "Changing TV audio channel" on page 40.
The Remote Control does not work properly.	• The Remote Control is not pointed at the remote sensor on the DVD Recorder.	• Point the Remote Control at the remote sensor on the DVD Recorder.
	• The Remote Control is too far from the DVD Recorder.	• Operate the Remote Control within 7 m.
	• There is an obstacle in the path of the Remote Control and the DVD Recorder.	• Remove the obstacle.
	• The batteries in the Remote Control are exhausted.	• Replace the batteries with new ones.

### Moisture Condensation

Moisture condensation can occur:	In locations where moisture condensation may occur:
<ul style="list-style-type: none"> <li>• If the DVD Recorder is moved from a cold place to a warm place.</li> <li>• Under extremely humid conditions.</li> </ul>	<ul style="list-style-type: none"> <li>• Keep the DVD Recorder plugged into an AC power outlet with POWER On. This will help prevent condensation.</li> <li>• If condensation has occurred, wait a few hours for the DVD Recorder to dry before using it.</li> </ul>

## Specifications

### General

Power requirements	AC 120V, 60 Hz
Power consumption	30W
Dimensions (approx.)	16.9 X 3.0 X 15.1 inches (w x h x d)
Mass (approx.)	12.1 lbs
Operating temperature	41°F to 95°F
Operating humidity	5 % to 90 %
Television system	NTSC color system
Recording format	NTSC

### Recording

Recording format	DVD Video Recording, DVD-VIDEO
Recordable discs	DVD-ReWritable, DVD-Recordable, DVD+ReWritable, DVD+Recordable
Recordable time	Approx. 1 hour (HQ mode), 2 hours (SQ mode), 4 hours (LQ mode), 6 hours (EQ mode)
<b>Video recording format</b>	
Sampling frequency	27MHz
Compression format	MPEG 2
<b>Audio recording format</b>	
Sampling frequency	48kHz
Compression format	Dolby Digital

### Playback

Frequency response	DVD (PCM 48 kHz): 8 Hz to 22 kHz, CD: 8 Hz to 20 kHz DVD (PCM 96 kHz): 8 Hz to 44 kHz
Signal-to-noise ratio	> 100 dB (AUDIO OUT connector)
Harmonic distortion	< 0.008% THD (AUDIO OUT connector)
Dynamic range	> 95 dB (AUDIO OUT connector)

### Inputs

ANTENNA IN	Antenna input, 75 ohms
VIDEO IN	1.0 Vp-p 75 ohms, sync negative, RCA jack x 2
AUDIO IN	0 dBm more than 47 kohms, RCA jack (L, R) x 2
DV IN	4 pin (IEEE 1394-1995 standard)

### Outputs

VIDEO OUT	1 Vp-p 75 Ω, sync negative, RCA jack x 1
S-VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, negative sync, Mini DIN 4-pin x 1 (C) 0.286 V (p-p) 75 Ω
COMPONENT VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, negative sync, RCA jack x 1 (Pb)/(Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2
Audio output (digital audio)	0.5 V (p-p), 75 Ω, RCA jack x 1
Audio output (optical audio)	3 V (p-p), 75 Ω, Optical connector x 1
Audio output (analog audio)	2.0 Vrms (1 KHz, 0 dB), 600 Ω, RCA jack (L, R) x 1

### Accessories:

Video Cable . . . . .	1	Audio Cables (L, R) . . . . .	1
RF Coaxial Cable . . . . .	1	Remote Control . . . . .	1
Batteries . . . . .	2		

- Design and specifications are subject to change without notice.
- Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.
- DTS and DTS Digital Out are registered trademarks of Digital Theater Systems, Inc.





## LG Electronics U.S.A., Inc. Limited Warranty - USA

This LG Electronics product, will be repaired or replaced, at LG's option, if it proves to be defective in material or workmanship, under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original consumer purchase of the product. This warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S. Territories.

<b>WARRANTY PERIOD:</b>	<b>HOW SERVICE IS HANDLED:</b>
<b>LABOR:</b> 90 days from the Date of Purchase.	<b>Call 1-800-243-0000</b> for instructions on getting the defective unit repaired or replaced.
<b>PARTS:</b> One Year from the Date of Purchase.	<b>Please retain dated sales receipt and your box</b> to return the unit to LG for repair or replacement.
* Parts replaced are warranted for the remaining portion of the original warranty period.	Shipping both ways will be paid by LG during the Warranty Period. After the Warranty Period, you pay inbound shipping charges and LG pays return shipping charges.
	Visit our website at: <a href="http://www.lgservice.com">http://www.lgservice.com</a>

**THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. LG ELECTRONICS WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL OR PUNITIVE DAMAGES OF ANY NATURE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT OR OTHERWISE.** Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that may vary from state to state.

### **THIS LIMITED WARRANTY DOES NOT APPLY TO:**

- Damages or operating problems that result from shipping, installation, adjustment of user controls, calibration, maintenance or failure to maintain, or separate system components; and
- Damages or operating problems that result from normal wear and tear, misuse, abuse, operation outside environmental specifications or contrary to the requirements or precautions in the Operating Guide, accident, lightning strikes or other natural causes, unauthorized modification or alteration, incorrect electrical current or voltage, reception problem caused by inadequate home antenna or faulty antenna connections, computer software, institutional or commercial use, or other causes not arising out of defect in material or workmanship.

Therefore, the cost of repair or replacement of such defective product shall be borne by the consumer.

### **CUSTOMER INTER-ACTIVE CENTER NUMBERS:**

<b>For nearest Authorized Service Center, Where to buy, Product Assistance, or Customer Assistance</b>	<b>Call 1-800-243-0000</b> (24 hours a day, 365 days per year) and select appropriate options from the menu. Or visit our website at <a href="http://www.lgservice.com">http://www.lgservice.com</a>
--	---

Marketed and distributed in the United States by LG Electronics U.S.A., Inc.

LG ELECTRONICS U.S.A., INC.  
1000 SYLVAN AVENUE  
ENGLEWOOD CLIFFS, NJ 07632

P/N : 3834RD0021H  
Printed in Korea  
Issue O